
RXYQ34-54P

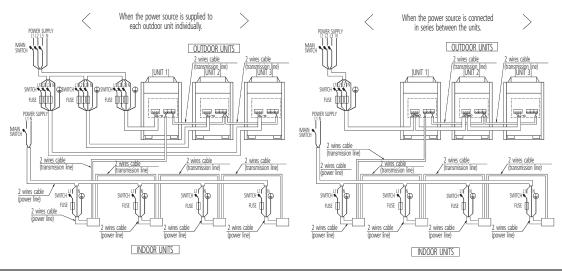

NOTES

- All wiring, components and materials to be procured on the site must comply with the applicable local and national codes.
- 2 Use copper conductors only.
- 3 As for details, see wiring diagram.
- 4 Install circuit breaker for safety.
- 5 All field wiring and components must be provided by licensed electrician.
- 6 Unit shall be grounded in compliance with the applicable local and national codes.
- 7 Wiring shown are general points-of-connection guides only and are not intended for or to include all details for a specific installation.

- 8 Be sure to install the switch and the fuse to the power line of each equipment.
- 9 Install the main switch that can interrupt all the power sources in an integrated manner because this system consists of the equipment utilizing the multiple power sources.
- 10 The capacity of UNIT1 must be larger than UNIT2 when the power source is connected in series between the units.
- 11 If there exists the possibility of reversed phase, lose phase, momentary blackout or the power goes on and off while the product is operating, attach a reversed phase protection circuit locally. Running the product in reversed phase may break the compressor and other parts.

Все каталоги и инструкции здесь: http://splitoff.ru/tehn-doc.html