

# Indoor Unit Operation & Installation Manual

AD322MMAHA

AD382MMAHA

AD482MMAHA

No.0010578410

- Please read this manual carefully before using
- Keep this operation manual for future reference



Большая библиотека технической документации  
<http://splitoff.ru/tehn-doc.html>  
каталоги, инструкции, сервисные мануалы, схемы.

# User Manual

---

## Contents

Your air conditioner may be subject to any change owing to the improvement of Haier products.

MRV series multiple air conditioning systems adopt the consistent running mode, by which, all indoor units can

To protect the compressor, the air conditioning unit should be powered on for over 12 hours before the operation of air conditioner.

### Product Features

1. Function of central control (optional from our company);
2. Automatic display of fault detection;
3. The air conditioner is provided with the function of compensation for power supply. During operation, when the power supply fails emergently and resumes again, the air conditioner returns to the working condition before power failure, if provided with compensation function.
4. Now this indoor unit only has wired controller function, the indoor unit that has remote controller function need to set in factory especially.

Parts and Functions ..... 1-5

Safety Considerations ..... 6-7

Operation instruction ..... 8-15

Maintenance ..... 16

Fault Checkup ..... 17

Installation Procedures ..... 18-24

Electrical Wiring ..... 25-30

Functions of Wired Controller ..... 31


Test Run & Fault Code ..... 32

Technical Specifications ..... 33


# Parts and Functions

---

indoor unit

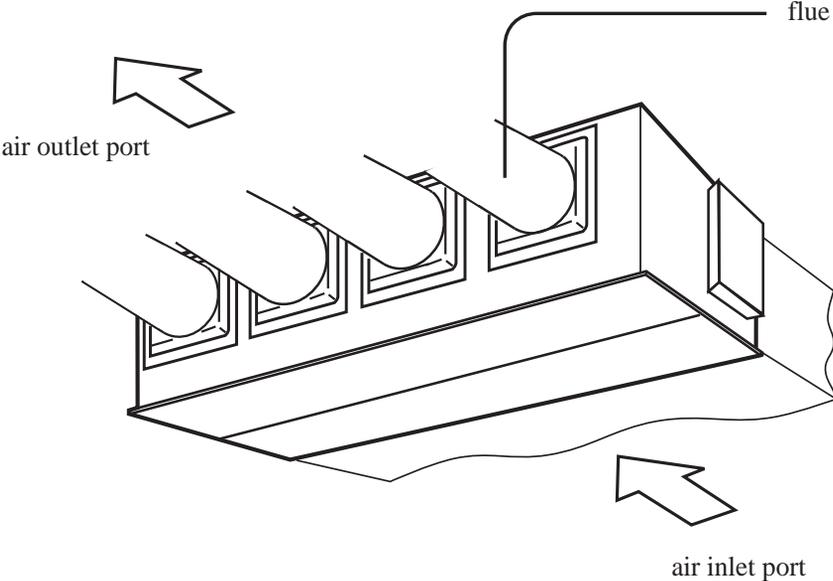

# Parts and Functions

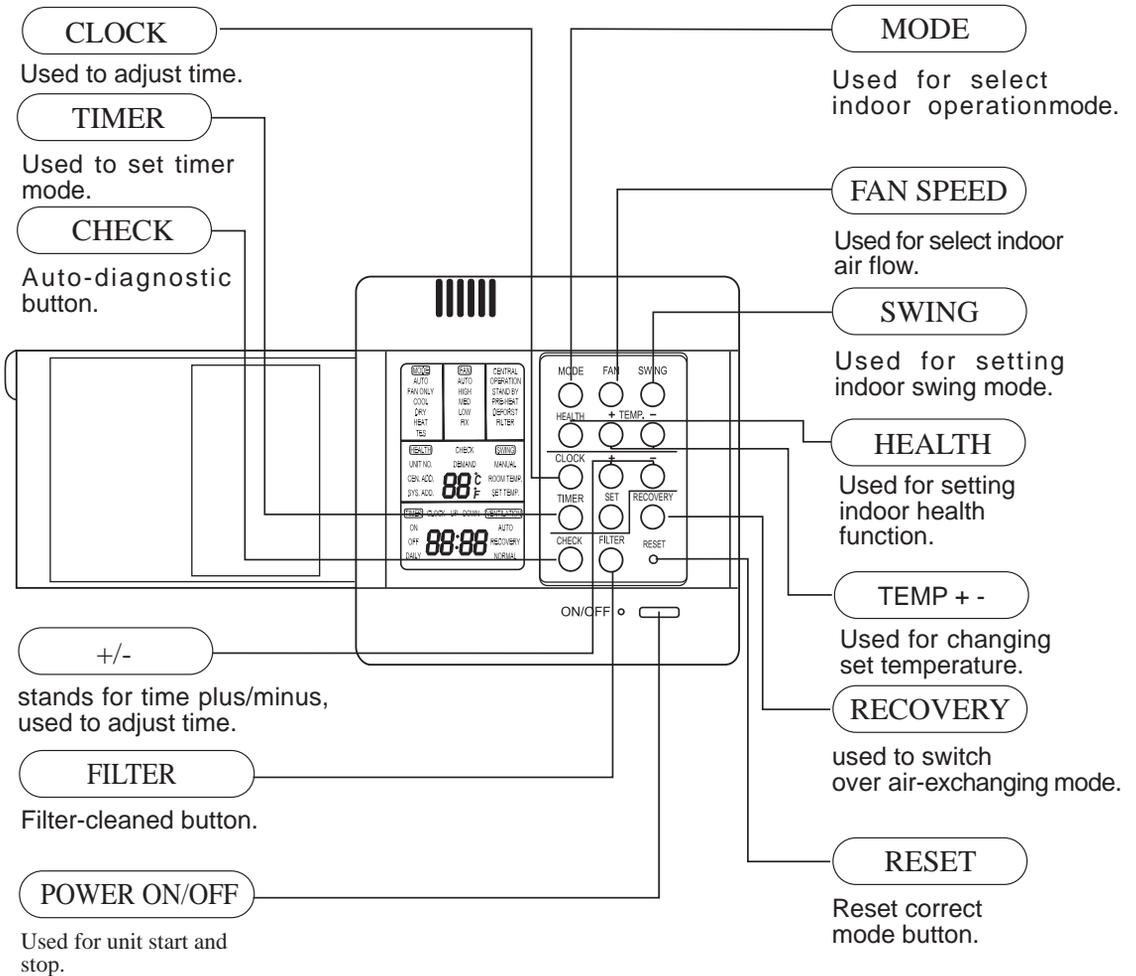

**Cautions:**  
On cooling only unit, heating mode is not available.

**Note:**  
The above information is the explanation of the displayed information therefore varies with those displayed in actual operation.

# Parts and Functions

## [MODE]

- [AUTO]:Auto operation mode.
- [FAN ONLY]:air-throwing mode.
- [COOL]:Cooling operation mode.
- [DRY]:Dehumidification mode.
- [HEAT]:Heating operation mode.

## [FAN]

- [AUTO]:Auto fan running.
- [HIGH]:High fan speed.
- [MED]:Medium fan speed.
- [LOW]:Low fan speed. [FIX]: Fixed fan speed, it will display only when fixed fan speed is requested to main in

[OPERATION]:Running mode.

[STAND BY]: Waiting mode.

[PRE-HEAT]: Pre-heating mode.

[DEFROST]: Defrosting mode.

[FILTER]: Request of filter to be cleaned.


[HEALTH]:Health function.

[CEN.ADD]:Central control address, the address number will display on "88".

[SYS.ADD.]:System address, the address number will display on "88".

[CHECK]:Auto-diagnostic, trouble shooting.

[DEMAND]:Compulsory operation function, when it works, [CENTRAL] will flash.

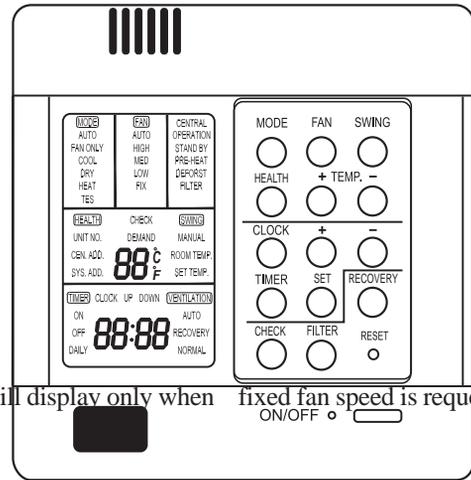

[SWING][MANUAL]:Swing mode.

[ROOM TEMP.]:Indoor ambient temperature.

[SET TEMP.]:Set admired temperature.

[TIMER]

[ON]:Timer function is on.

[OFF] :Timer function is off.

[ON][OFF] :Timer function ON-OFF.

[ON][OFF][DAILY]:Timer ON-OFF will switch over in turn daily

[CLOCK]:Clock display, the displaying time is the current time of the clock.

[UP],[DOWN]:Indicator of filter elevating.


[VENTILATION]

[AUTO]:Auto ventilation mode.

[NORMAL]:Normal ventilation mode.

# Parts and Functions

## Remote controller

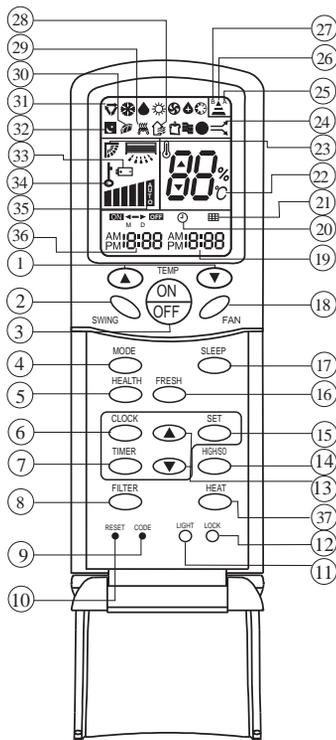

### 1.TEMP Setting Button

(Used to set temperature. Setting ranges: 16°C to 30°C)

In Up/Down function of filter, for controlling up and down filter.

### 2.SWING Button

If you press this button once, auto swing will be activated.If you press this button again, the louver will return to the present position.

### 3.Power ON/OFF Button

Used for unit start or stop  
After power on, the LCD of remote controller will display the previous operation state (except for TIMER,SLEEP and SWING state).

### 4.Operation MODE

Used to select operation mode.

Every time you press MODE button, operation mode changes according to following sequence:



### 5.HEALTH Button

### 6.CLOCK Button

Used to set correct time.

### 7.TIMER Button

Used to select TIMER mode:TIMER ON,TIMER OFF, TIMER ON/OFF.

(Note: if time of TIMER ON is the same as TIMER OFF,TIMER ON/OFF cannot be set)

### 8. FILTER Button

Used to set up/down function of filter.

### 9.CODE Button

Used to select Code A or B, Normally at Code A.

As you can't control the indoor unit, please change the Codeto B.

### 10.RESET Button

Press this button by using a sharp article to resume the correct operation of the remote controller in case of need, i.e. for example in case of malfunctions due to electromagnetic disturbance.

### 11.LIGHT Button

Used to light the control panel

### 12.LOCK Button

Used to lock operation button and LCD display contents: by pressing this button, other buttons comes out of function andlock state display will be no more active and lock state display will disappear.

### 13.HOUR Adjustment

Used to set clock and timer setting

### 14.HIGH/SO Button

Used to select HIGH or SOFT operation.

### 15.SET Button

Used to confirm TIMER and CLOCK settings.

### 16.FRESH Button

Used to set fresh mode, the unit will draw in fresh air.

**NOTE:** 1.Models in this manual have no functions ⑤⑧⑪⑭⑯⑰⑲⑳㉓㉔㉕㉖㉗㉘㉙㉚㉛

### 2.HIGH/SO button

This button is active in Cooling/Heating mode, the fan speed is in AUTO mode after pressing it and " high function " will be automatically cancelled after 15 minutes running.

# Parts and Functions

## 17.SLEEP Button

(The clock must be corrected before setting sleep function)

Used to set sleep mode.

## 18.FAN Button

Used to select fan speed:LOW,MID,HIGH,AUTO.

## 19.TIME Display

## 20.TIMER Display

## 21.FILTER Display

When the filter need be cleaned, you can press the FILTER button for 3s, to up/down function.

## 22.TEMPERATURE Display

## 23.AUTO SWING Display

## 24.HIGN/SO Run Display

## 25.Code A of controller's state

Code A is used for this unit

## 26.SIGNAL SENDING Display

## 27.Code B of controller's state

## 28.Fresh Display

## 29.Auxiliary ELECTRICAL HEATING Display

## 30.HEALTH Display

Displays when healthy run function is set.

## 31.Operation MODE Display

AUTO RUN	COOL RUN	DRY RUN	HEAT RUN	FAN RUN

## 32.SLEEP State Display

## 33.BATTERY Energy Display

Notify the user when it is time to change the batteries.

## 34.LOCK State Display

## 35.FAN SPEED Display



## 36.TIMER ON Display

## 37.HEAT Button

Used to select auxiliary heater.

## Remote Controller Operation

- When in use, direct signal transmission head to the receiver placed on the indoor unit


- The distance between the remote controller and the receiver should be max 7m and there should be no obstacle between them
- Do not throw the remote controller; prevent it from being damaged.
- When operating the remote controller in an area where electronically controlled lights are installed or wireless handsets are used, as the function of the remote controller might be affected by signals emitted by the above mentioned equipments.

## Battery loading

Battery loading

Batteries are fitted as follows:

Remove the battery compartment lid Slightly press and disengage the battery compartment lid marked with and then hold the remote controller by the upper section and then remove the battery c

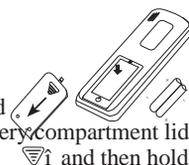

## Loading the battery

Ensure that batteries are correctly placed in the compartment

**Replacing the battery compartment lid** The battery compartment lid

**Display review** Press the button to see if batteries are properly fitted

## Confirmation indicator

If no indication is displayed after press ON/OFF button, reload the batteries.

Caution:

If the remote controller does not operate as designed after fitting new




Note:  
It is recommended that the batteries be removed from the compartment of operation mode after the batteries are replaced. When the test is conducted, all icons will appear on the screen and then di

## Clock Set

When unit is started for the first time and after replacing batteries in remote controller, clock should be adjusted as follows:

- 1.Press CLOCK button, clock indication of " AM " or " PM " flashes.
- 2.Press ▲ or ▼ to set correct time. Each press will increase or decrease 1 min. If the button is kept pressed, time will increase or decrease quickly.
- 3.After time setting is confirmed, press "SET" : AM or PM stop flashing, while clock starts working.

Note:AM means morning and PM means afternoon.

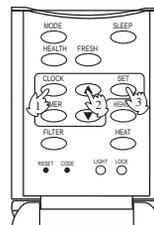

# Safety Considerations

- If the air conditioner is transferred to a new user, this manual shall be transferred to the user, together with the conditioner.
- Before installation, be sure to read Safety Considerations in this manual for proper installation.
- The safety considerations stated below is divided into  Warning and  Attention. The matters on severe accidents caused from wrong installation, which is likely to lead to death or serious injury, are listed in  Warning. However, the matters listed in  Attention are also likely cause the severe accidents. In general, both of them are the important items related to the security, which should be strictly abided by.
- After the installation, perform test run to make sure everything is in normal conditions, and then operate and maintain to the user for proper keeping.

 

## Warning

- Please ask the special maintenance station for installation and repair. Water leakage, electric shocks or fire accidents might be caused from improper installation if you conduct the installation by your own.
- The installation should be conducted properly according to this manual. Water leakage, electric shocks or fire accidents might be caused from improper installation. Please make sure to install the air conditioner on the place with sufficient support strength.
- The air conditioner can't be installed on the grids such as the non-special metal burglar-proof net. The place with insufficient support strength might cause the dropdown of the machine, which may lead to personal injuries. The installation should be ensured against typhoons and earthquakes, etc. The installation unconfined to the requirements will lead to accidents due to the turnover of the machine. Specific cables should be used for electrical connections and fixings might lead to such accidents as heating or fire accidents. Correct shapes of wirings should be kept while the embossed shape is not allowed. The wirings should be reliably connected to avoid the cover and the plate of the electrical cabinet lipping the wiring. Improper installation while placing or reinstalling the air conditioner, except the specific refrigerant (R22), don't let the air go into the refrigeration cycle system. The air in the refrigeration cycle system might lead to the cracking or personal injuries due to abnormal high pressure of the refrigeration cycle system. During installation, please use the drain pipe to drain the water from the drainpipe to the waterspout where may exist harmful gases such as sulfureted gas to avoid the harmful gases entering into the room. During installation, if refrigerant leakage occurs, After installation, check if any refrigerant leakage exists. If the refrigerant gas leaks in the room, such things as air blowing heaters and stoves, etc. may generate harmful gases. Don't install the air conditioner at the place where the drainpipe should be properly mounted according to this manual as to ensure the smooth drainage. In addition,
- 
- 
- 
- 
- 
- 
- 
- 

## Attention

- The air conditioner should be effectively grounded. Electric shocks may occur if the air conditioner is ungrounded or inappropriately grounded. The wire for earthing should not be connected to the connections on the gas pipe, water pipe, lightning rod or telephone. The breaker for electricity leakage should be mounted. If no
- 
-

# Safety Considerations

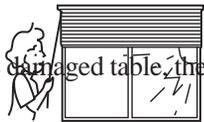
 Attention	
Notices during Operation	<ul style="list-style-type: none"> <li>It is not allowed to put any heating apparatus under the indoor units. For the heat may cause distortion of the indoor unit. If the heat is not powered off. The power switch of the outdoor unit switch should be powered off for a long period.</li> <li>Pay attention to the condition of the air conditioner to avoid a period of its operation.             </li> <li>Flammable apparatus should not be placed in the place where the air conditioner wind could reach directly, or incomplete burning of the apparatus may be caused.             </li> <li>Check the mount table of the air conditioner for damage for a long period of operation. If placed on the damaged table, the unit may drop down to avoid the sunshine.            </li> <li>Do not touch the switch with the wet hand to avoid power leakage.            </li> <li>Stop running and switch off the manual power switch when cleaning the unit.            </li> <li>During the operation of the control unit, don't switch off the manual power switch and the controller can be used. Please don't press the stop button.            </li> <li>Cleaning the unit with water may cause electric shock or fire.            </li> <li>Do not use water heater or like next to the indoor unit and the wired controller. Water/power leakage or short circuit may happen if the steam generating apparatus is working next to machine.            </li> <li>Do not put flammable spray close to the air conditioner. Don't inject flammable spray towards the air conditioner, which may cause fire.             </li> <li>Defrosting during heating To improve the heating effect, the outdoor unit will perform defrosting automatically when frost appears on the outdoor unit during heating (approx. 10 minutes). The unit which stops operating will actuate the fan while other indoor unit are in the operating state.            </li> </ul>

# Operation instruction

Wired controller


## FAN ONLY OPERATION:

- 1) Start up operation: press the button of ON/OFF, the system will start up, and will display on LCD.
- 2) Select MODE: press the MODE button, then you will see in the display section [MODE] switch over in below sequence: [FAN ONLY] → [COOL] → [DRY] → [HEAT] → [AUTO] → [FAN ONLY]. Select [FAN ONLY].
- 3) Select fan speed: press FAN button, then you see in the display section [FAN] switch over in below sequence: [HIGH] → [MED] → [LOW] → [HIGH]. Select proper fan speed.
- 4) Power off: press ON/OFF button, indoor unit will be powered off, there are only time and the ambient temperature in the screen.

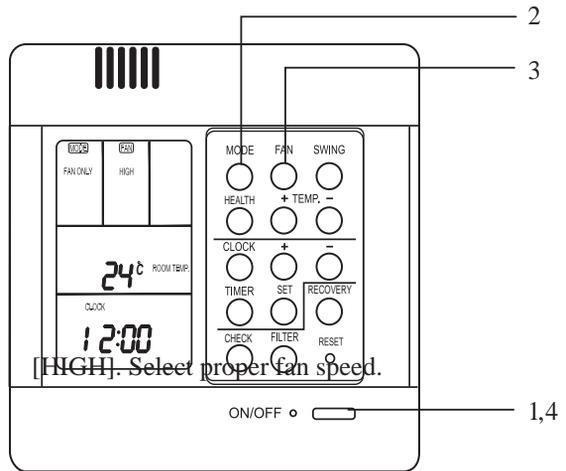

## AUTO operation, COOLING, HEATING and DEHUMIDIFICATION operation

- 1) Start up operation: press the button of ON/OFF, the system will start up, and will display on LCD.
- 2) Select MODE: press the MODE button, then you will see in below sequence: [FAN ONLY] [COOL] [DRY] [HEAT] [AUTO] [FAN ONLY].
- 3) Change set temperature: press TEMP+ or - every time, [SET] will display, and set temperature will increase/reduce 1 C (F).
- 4) Select fan speed: press FAN button, then you see in the display section [FAN] switch over in below sequence: [HIGH] [MED] [LOW] [HIGH]. Select proper fan speed.
- 5) Select [SWING]: press [SWING] button, → [SWING] will display, swing function is valid, press again, [SWING] will disappear, swing function is invalid.
- 6) Set [HEALTH]: used to set the indoor health function. Press it once, [HEALTH] will display in the display section, then indoor health function is valid. Press it again, [HEALTH] will disappear, then the health function is invalid. This function is valid only for the unit with health function.
- 7) Power off: press ON/OFF button, indoor unit is powered off. There are only time and the ambient temperature in the screen.

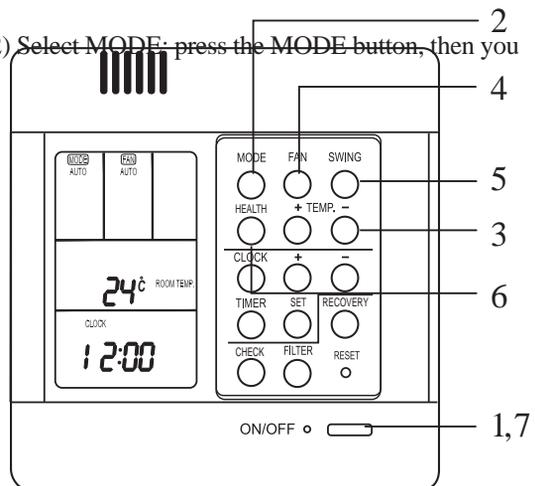


### Set TIMER operation:

Adjust clock: when powered on, for the first time to set timer function, the clock will be adjusted.

Press **CLOCK** button, and set the current clock. Now, **CLOCK** will flash at the frequency of 2Hz every minute. Press the clock +/- button; the current clock can be adjusted. Until the proper time comes, press [SET]

### TIMER ON operation:

Press **TIMER** button, and keep pressing it, in the display section [TIMER] will switch over in below sequence: [ON] [OFF] [ON][OFF] [ON][OFF][DAILY] [ ]. Select [TIMER] [ON], then [TIMER] [ON] flashes, press the clock +/- button to adjust the time of TIMER ON, press [SET] button.

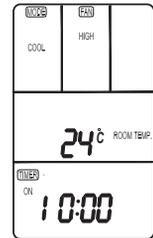

### TIMER OFF operation:

Press **TIMER** button, and keep pressing it, in the display section [TIMER] will switch over in below sequence: [ON] [OFF] [ON][OFF] [ON][OFF][DAILY] [ ]. Select [TIMER] [OFF], then [TIMER] [OFF] flashes, press the clock +/- button to adjust the time of TIMER OFF, press [SET] button.

### TIMER ON-OFF operation:

Press **TIMER** button, and keep pressing it, in the display section [TIMER] will switch over in below sequence: [ON] [OFF] [ON][OFF] [ON][OFF][DAILY] [ ]. Select [TIMER] [ON] [OFF]. Firstly, [TIMER] [ON] flashes, press the clock +/- button to adjust the time of TIMER ON, press [SET]. [TIMER] [ON] will be constant on. Then [TIMER] [OFF] flashes, press the clock +/- button to adjust the time of TIMER OFF, press [SET]. The time sequence of timer on and timer off will determine the mode is [TIMER] [ON] [OFF] or [TIMER] [OFF] [ON].

Note: 1. If the two times are the same, the unit will adjust the state after set time arrives according to the current state. If current state is in **power off** mode, after set time arrives, the unit will switch to running mode.

2. When in **TIMER** setting state, if you do not input any button in continuous 10 seconds, the unit will think [SET] pressed.

### Cancel TIMER operation:

In the timer operation state, press [TIMER] button, the unit will quit from the current timer operation state, and the set data will be memorized, then enter the next timer mode.

After timer be set, press **ON/OFF** to cancel timer mode. When in running again, timer mode will be continuous (without timer).

### [FILTER] function

When the wired controller receives the filter-cleaned signal from indoor unit, [FILTER] will display. After finishing clean, press [FILTER], the sign [FILTER] disappears, and the controller will send the filter reset signal to indoor unit.

When the sign [FILTER] not display, it is invalid to press [FILTER] in short time.


### **FILTER ELEVATING function: (only for the unit with elevating function)**

In power off state, press [FILTER] for 5 seconds to enter filter elevating set state. In this state, the sign [FILTER] will flash at the frequency of 2Hz. By pressing [+] TEMP [-], filter can go up or down. Press TEMP [+], in timer section [UP] will display, while press TEMP [-], in timer section [DOWN] will display. Press [FILTER] button to quit the mode. This function is invalid for the AD\*2MMAHA models in this book.

### **DEMAND operation function:**

In the stop state of cooling mode, press [ON/OFF] button for 5 seconds to enter [DEMAND] cooling operation state, the sign [DEMAND] will display. In the 7-segmet liquid crystal screen of set temp. section, 0 will display in first position, which shows that No. 0 indoor unit has enter demand operation. In the second position, L will display, in the meantime, [COOL] will flash, [FAN][AUTO] is constant on. Press TEMP [+] [-] to set different indoor unit. Press [ON/OFF] to cancel [DEMAND] operation.

In the stop state of heating mode, press [ON/OFF] button for 5 seconds to enter [DEMAND] heating operation state, the sign [DEMAND] will display. In the 7-segmet liquid crystal screen of set temp. section, 0 will display in first position, which shows that No. 0 indoor unit has enter demand operation. In the second position, H will display, in the meantime, [HEAT] will flash, [FAN][AUTO] is constant on. Press TEMP [+] [-] to set different indoor unit. Press [ON/OFF] to cancel [DEMAND] operation.

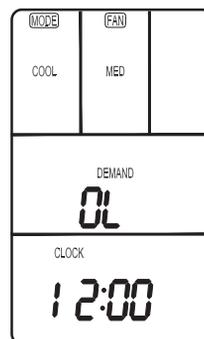

### **VENTILATION mode (only for the unit with fresh air function or heat recovery function)**

Press [RECOVERY] button, then the unit will switch over the ventilation mode:

[ ] → [VENTILATION][AUTO] → [VENTILATION][RECOVERY] → [VENTILATION][NORMAL] → [ ], please select appropriate ventilation mode.

### **Query indoor malfunction history:**

In the state of power on or power off, press [CHECK] button, enter the malfunction-querying mode of all indoor units in the group. Then [CHECK] and [UNIT NO.] will display, and the actual indoor numbers will be displayed in some sequence (unit number is in decimals). At the same time, in the time region, there will be the current malfunction and the latest fine malfunction, the displaying format is [XX:YY], in which X time malfunction. The failure code of every unit will display for 3 seconds. After the failure codes of all indoor units in the whole group are displayed, the mode will quit automatically.

**Clear abnormal state and malfunction history:** In normal state, press [CHECK] button for 5 seconds

### Query indoor performance state:

Under normal condition, press  $\hat{\text{Setting}}$  button for 5 seconds until the temperature zone on the liquidcrystal screen displays  $\hat{\text{Temp. +/-}}$  button. The time zone displays [YZZZ], in which, Y refers to the data type and ZZZ to the responding data. Select the data type by  $\hat{\text{Time +/-}}$  button.

Y	ZZZ	System
A	Temperature of indoor unit transducer TA	Actual value, decimal system
B	Temperature of indoor unit transducer TC1	Actual value, decimal system
C	Temperature of indoor unit transducer TC2	Actual value, decimal system
D	PMV step of indoor units	Actual value/2. decimal system(e.g. indication of 50 with actual value)
E	Communication address between indoor/outdoor units	Actual value, sexadecimal system
F	Central address	Actual value, sexadecimal system


Under the inquiring state, press  $\hat{\text{CHECK}}$  button to quit the inquiring state and return to the normal operating state.

### How to change the function switches?

No.	Type	State of switch	Function description
J03	Display of room temperature	Connected	Yes
		Cut off	No
SW01 ①	Changeover of master or slave controller	ON	Set as slave controller
		OFF	Set as master controller
SW01 ②	°C or °F	ON	°F
		OFF	°C
D1	Shorten time function	Connected	Indoor unit in shorted time function
		Cut off	Common control
D2	Compulsorily defrost	Connected	Send compulsorily defrost signal to indoor unit
		Cut off	Common control

Note: The switches in grey can be operated after opening the cover of wired controller.

### AUTO, COOL, HEAT and DRY Operation

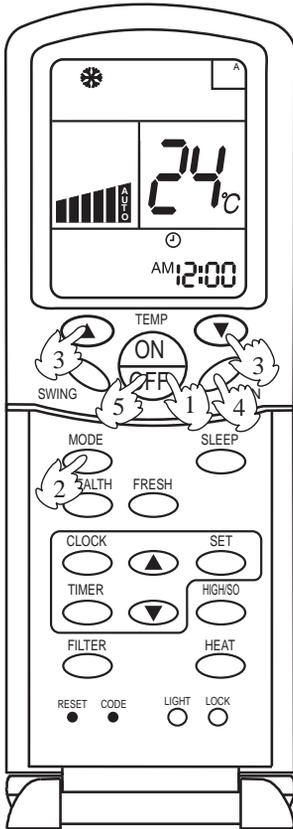


#### 1. Unit start

Press ON/OFF button, unit starts. Previous operation status appears (TIMER, SLEEP and SWING setting)

#### 2. Select operation mode

 Press MODE button. At each press, operation mode changes as follows:



Then  or  or

#### 3. Temperature setting

Press TEMP button.

- ▲ Every time the button is pressed, temp. setting increases 1°C; if the button is kept pressed, temp. setting will increase quickly.
- ▼ Every time the button is pressed, temp. setting decreases 1°C, if the button is kept pressed, temp. setting will decrease quickly.

Set proper temperature

#### 4. Adjust FAN button


Press FAN button. At each press, fan speed changes as follows:



Air conditioner will run at the selected fan speed.

#### 5. Unit stop

Press ON/OFF button, unit stops.

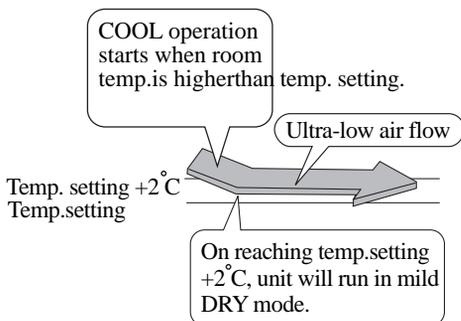


In FAN mode, the temperature setting is not displayed on LCD.

In DRY mode, when room temperature becomes 2°C higher than temperature setting, unit will run intermittently at LOW speed regardless of FAN setting. When room temperature is lower than temperature setting, unit will only run FAN operation.

In HEAT mode, warm air will blow out after a short period of time due to cold-draft prevention function.

## Fan Operation (Only for Code A)

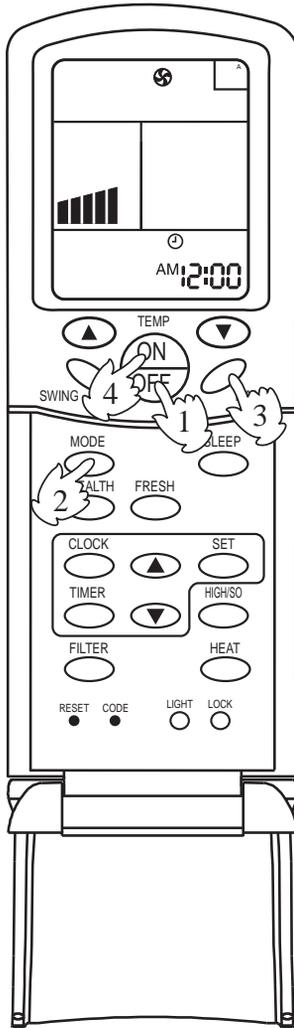

### 1. Unit start

Press ON/OFF button to start your air conditioner.

Previous operation status appears on LCD (except for TIMER, SLEEP, and SWING setting).

### 2. Select operating mode

Press MODE button. At each press, operation mode changes as follows:



Then select FAN

### 3. Adjust fan speed

Press FAN button. At each press, fan speed changes as follows:



Air conditioner will run at the selected fan speed. When in AUTO mode, unit will adjust fan speed according to room temperature automatically.

### 4. Unit stop

Press ON/OFF button to stop unit.

#### About FAN mode


When the air conditioner runs in FAN mode, it is not possible to select AUTO FAN or to set temperature.

Adjusting air flow direction (Models in this manual have no this function)

### AUTO SWING

Press SWING button.

Up and down airflow varies upwards and downwards. Left and right airflow varies left and right sides.

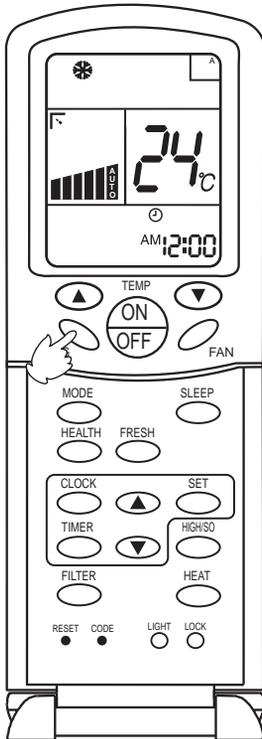

### AUTO SWING

When the automatic swing louver moves to the proper angle, press SWING button can fix the airflow direction.

- Always use SWING button on the remote controller to adjust flaps. Adjusting them by hand may result in air conditioner's abnormally running.
- In COOL or DRY mode, do not leave the louver in downward position for a long time, as the water vapor close to the grille may condense and water may drop from the air conditioner.
- Please carefully set temperature when children, old or infirm people uses the air conditioner.
- If the vertical flaps are completely turned towards left or right, the louver will drop water.
- Never adjust the louver directly by hand, as this could make it work abnormally. If the louver work abnormally, stop unit, restart and adjust the louver by remote controller.

After unit stops:

Displays on the LCD disappear.

All indicators on the indoor unit go out.

Swing louver automatically close the air outlet.

### Hints:


As in COOL mode air flows downwards, adjusting airflow horizontally will be much more helpful for a better air circulation

As in HEAT mode air flows upwards, adjusting airflow downward will be much more helpful for a better air circulation.

Be careful not to catch a cold when cold air blows downward directly.

## Timer ON/OFF Function

Set clock correctly before starting TIMER operation

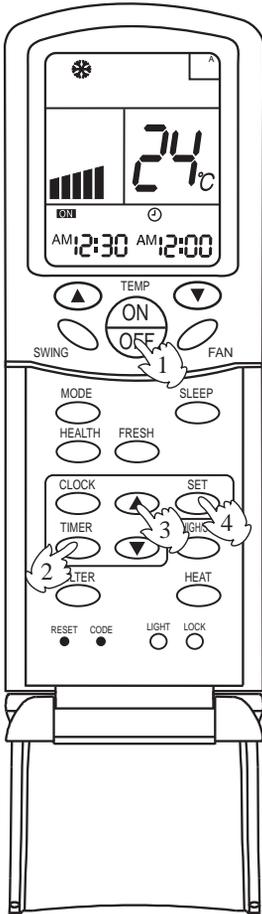

### 1. Unit start

After unit start, select your desired operation mode (operation mode will be displayed on LCD)

### 2. TIMER mode selection

Press TIMER button on the remote controller to change TIMER mode. Every time the button is pressed, display of TIMER mode changes as follows:



Then select TIMER mode as needed (TIMER ON or TIMER OFF).

Now **ON** or **OFF** will flash.

### 3. TIMER setting (press time adjust buttons $\blacktriangle$ / $\blacktriangledown$ )

$\blacktriangle$  Every time the button is pressed, time increases 10 minutes.

If the button is kept pressed, time will changes quickly.

$\blacktriangledown$  Every time the button is pressed, time decreases 10 minutes.

If the button is kept pressed, time will changes quickly.

It can be adjusted within 24 hours at will.

### 4. Confirm setting

After setting correct time, press SET button to confirm time. Now

**ON** or **OFF** stop flashing.

Time displayed: unit starts or stops at X hour X min (TIMER ON or TIMER OFF)

### 5. Cancel TIMER mode

Just press TIMER button several times until TIMER mode disappears.

Hints:

After replacing batteries or if a power failure occurs, TIMER setting must be reset.

Remote controller has memory function. When you use TIMER mode next time, just press SET button after mode selection if timer setting is the same as the previous one.

# Maintenance

\*Only when the air cleaner is switched off and disconnected to the power supply can it be cleaned, or electric shock and injury may appear.

## Cleaning the air outlet port and the shell:

### ⚠ Attention

- Don't use gasoline, benzene, diluents, polishing powder or liquid insecticide to clean them.
- Do not clean them with hot water of above 50\* to avoid fading or distorting.
- Wipe them with soft dry cloth.
- Water or neutral dry cleanser is recommended if the dust cannot be removed.
- The Wind Deflector can be dismantled to clean (as below).

## Cleaning Wind Deflector:

- Do not wipe the wind deflector with water forcibly to avoid falling off.

## Cleaning Air Cleaner:

### ⚠ Attention

- Don't rinse the air cleaner with hot water of above 50\* to avoid fading and distorting.
- Don't put the air cleaner on the fire to dry to avoid catching fire.

- Wipe dust with water or dust collector.

(A) Wipe dust with dust collector.



(B) Clean it with soft brush in mild detergent if there is too much dust on it

Throw off the water and airing it in the cool dry condition.



## Maintenance before and after Operating Season

Before Operating Season:

1. Please make the following checkup. If abnormal condition occurs, consult the after-service personnel.

There is no blockage in inlet port and outlet port of outdoor and indoor units.

The ground line and the wiring are in the proper state

2. After cleaning, the air cleaner must be mounted.
3. Switch on to the power.

After Operating Season:

1. In sunny days, blowing operation can be performed for half a day to make the inside of machine dry.
2. Electrical power should be cut down to economize electricity, or the machine will still consume power. Air cleaner and shell must be mounted after cleaning.

# Fault Checkup

Please check the following when consigning repair service:

	Symptoms	Reasons
All these are not problems	<ul style="list-style-type: none"> <li>Water flow sound</li> </ul>	Water flow sound can be heard when starting operation, during operation or immediately after stopping operation. When it starts to work for 2-3 minutes, the sound may become louder, which is the flowing sound of refrigerant or the draining sound of condensed water.
	<ul style="list-style-type: none"> <li>Cracking sound</li> </ul>	During operation, the air conditioner may make the cracking sound, which is caused from the temperature changes or the slight dilation of heat exchanger.
	<ul style="list-style-type: none"> <li>Terrible smell in outlet air</li> </ul>	The terrible smell, caused from walls, carpet, furniture, clothing, cigarette and cosmetics, attaches on the conditioner.
	<ul style="list-style-type: none"> <li>Flashing operating indicator</li> </ul>	When switching it on again after power failure, turn on the manual power switch and the operating indicator flashes.
	<ul style="list-style-type: none"> <li>Awaiting indication</li> </ul>	It displays the awaiting indication as it fails to perform refrigerating operation while other indoor units are in heating operation. When the operator set it to the refrigerating or heating mode and the operation is
	<ul style="list-style-type: none"> <li>Sound in shutdown indoor unit or whitesteam appear</li> </ul>	To prevent oil and refrigerant from blocking the shutdown indoor units, refrigerant flows in the short time and make the sounds of refrigerant flowing. Other cold air
	<ul style="list-style-type: none"> <li>Clicking sound when switching their condition on</li> </ul>	When the conditioner is powered on, the sound is made due to the resetting of the expansion valve.
Please make another check.	<ul style="list-style-type: none"> <li>Start or stop working automatically</li> </ul>	Check if it is in the state of Timer-ON and Timer-OFF.
	<ul style="list-style-type: none"> <li>Failure to work</li> </ul> 	Check if there is a power failure. Check if the manual power switch is turned off. Check if the supply fuse and breaker are disconnected. Check if the protective unit is working. Check if refrigerating and heating functions
	<ul style="list-style-type: none"> <li>Bad cooling &amp; heating effects</li> </ul>	Check if air intake port and air outlet port of outdoor units are blocked. Check if the door and windows are open. Check if the filtering screen of air cleaner Check if the setting of wind quantity is at gentle breeze or low wind. Check if the setting of operation is at the Fan Operation state. Check if the temperature setting is proper.

Under the following circumstances, immediately stop the operation, disconnect the manual supply switch and contact the after-service personnel.

- When buttons are inflexible actuated;
- When fuse and breaker have been burnt over and over;
- When there are foreign objects and water in the refrigerator;
- When it cannot still be operated after removing the operation of protective unit;
- When other abnormal conditions occur.

# Installation Procedures

The standard attached accessories of the units of this series refer to the packing; prepare other accessories

1. Before installation [before finishing the installation, don't throw away the attached parts required for the in

- Determine the route to move the unit to the installation site;
- Don't tear the package open before moving the unit to the installation site. When unpacking is needed, a soft material or protector block with ropes can be used to lift the unit to avoid damaging or scrapin

2. Select the installation site

(1) The installation site should be selected according the following conditions, which should be approved by users.

- where an ideal air distribution can be ensured;
- where there is no blockage in the air passage;
- where the condensed water can be drained out properly;
- where the strength can bear the weight of the indoor unit;
- where enough space can be ensured for maintenance. The outside air should be input from the outdoor directly from the blast pipe. If the blast pipe can't be jointed, the air can't be input from the suspended ceiling.
- where the lengths of the piping between indoor units and outdoor units are within the allowable range (refer to Installation of Outdoor Units)
- where the distance of at least 1m between indoor units, outdoor units, mains supply, connecting wires and television or radio should be kept as to avoid the image disturbance and noises of the above electrical appliances. (Even if 1m can be ensured, noise might occur if there is strong electric wave.) Additionally, equipments, television or other valuables can't be put under the unit as to avoid the condensed water of the unit from dropping into the above articles, causingdamaging


(2) Height of Ceiling:

The ceiling should be located at the place, where the central position of air outlet port is less than 3m high above the ground.

(3) Hoisting studs should be used during installation. Check if the location can bear the weight of the unit. Reinforce it before installation if necessary.

3. Preparation before Installation

(1) Location relation between inspection hole on the ceiling and the unit and the hoisting studs (unit: mm).

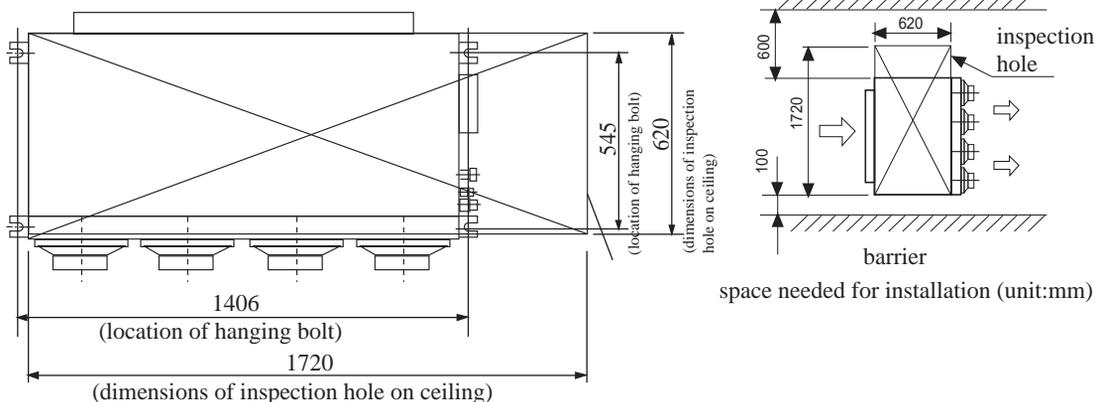


# Installation Procedures

(2) If necessary, make a hole for installation and inspection on the ceiling. (used for the situation with a ceiling)

- For the size of the inspection hole on the ceiling, please refer to the above drawing. Before installation,
- 
- 


(3) Install the hoisting studs (M10 bolts)

In order to support the weight of the unit, use barb bolts in the situation with a ceiling. In the situation

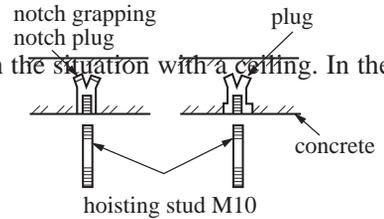

(4) Installation of Indoor Units

- Fix the indoor unit with the hoisting stud. If necessary, the machine can be hung on the beam with bolts instead of the hoisting stud.

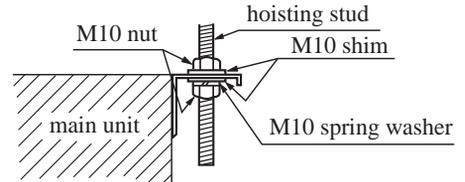


NB: When the sizes of the main unit don't match the hole on the ceiling, regulate the slot on the hanging bracket.

## Adjusting the level

(a) Adjust the level with a level meter or according to the following ways:

- Make the adjustment as shown in the figure below.

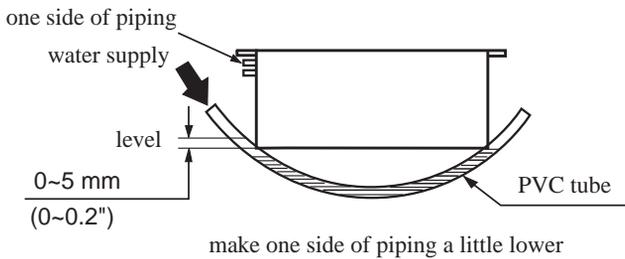

(b) Unless it is regulated to the level position, faults or errors might occur for the floater switch.

# Installation Procedures

## Choice of Blowing Wind from Blower (when using the high performance filter)

The blower is provided with a red terminal and a white terminal. The standard wind choice has been set before delivery. When the use of optional components, such as the high performance filter, causes the static pressure rising, change the connection of the connector mounted on the side of the control cabinet

standard blowing wind (at delivery)				high-speed blowing wind			
one side of control cabinet	white	connector, white	white	white	connector, white	red	black
	blue			blue			white
	yellow			yellow			blue
	red			red			red
one side of blower				one side of blower			


Static Pressure Range  
unit: Pa

Standard Static Pressure	Max. Static Pressure
50	96


## 5. Drainpipes

(a) Keep a gradient (1/50-1/100) of the drainpipes and avoid lobing or curving.

### • Proper Piping

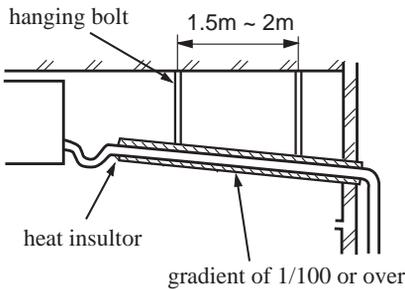


### • Improper Piping

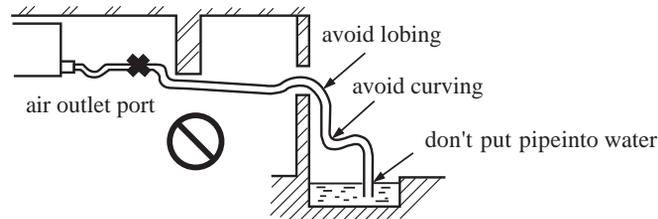


(b) When connecting the drainpipe to the equipment, don't apply too much force on one side of the equipment. Meanwhile, the piping should be positioned as close to the equipment as possible. For the drainpipe, the general purpose hard PVC tube can be purchased at local shops. During

(c)

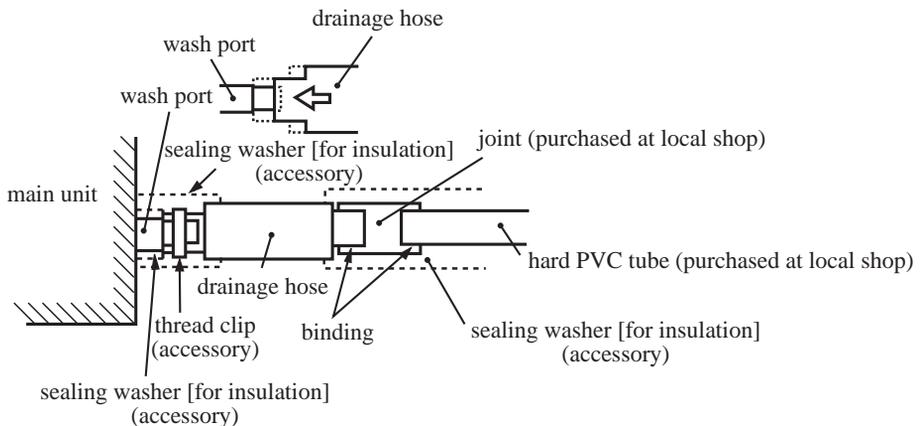


# Installation Procedures

- (d) When the laid drain piping is used for multiple equipments, the public piping should be lower about 100mm than the wash ports of equipments, as shown in the figure. Thicker pipes should be used for this application.

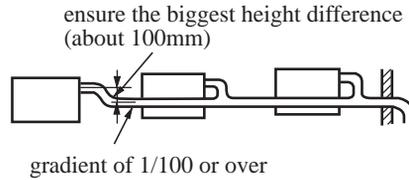

- (e) The hard PVC tube in the room must be provided with the heat insulating layer.
- (f) The water pipe should be lifted to the height of 500mm above the ceiling. If there is any barrier above the ceiling, a bracket and the like can be used to bypass the barrier. If the extended height exceeds 500mm, there will be too much back flow amount, causing the overflow in the waterspout. Therefore, the height of the drainpipe should be controlled within the allowance given below.

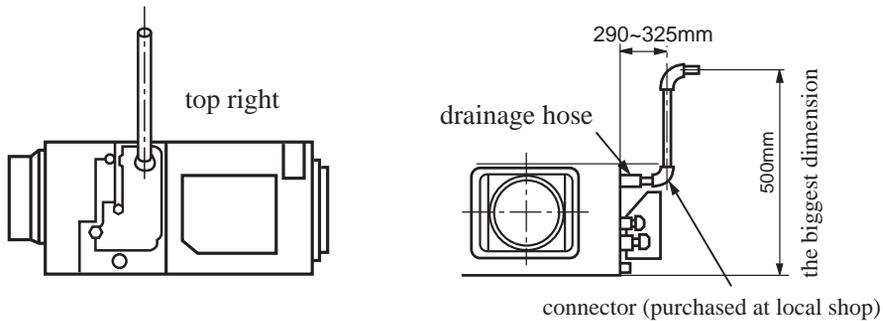

- (g) Don't place the drainpipes at the places where there is irritant gas. Don't put the drainpipe directly into the sewer, where there might be gases with sulfur.


## Testing Drainage System

- (a) After finishing the electrical system, test the drainage system.
- (b) During testing, make sure that the water flow passes the piping correctly without any water leakage at the connection.
- (c) In the condition of new house, test the drainage system before fitting up the ceiling. (d) Even if it is ins

## Procedures

- (a) Provide about 1000cc of water to the equipment via air outlet port with the feed pump.
- (b) During refrigerating operation, check the drainage system..


# Installation Procedures

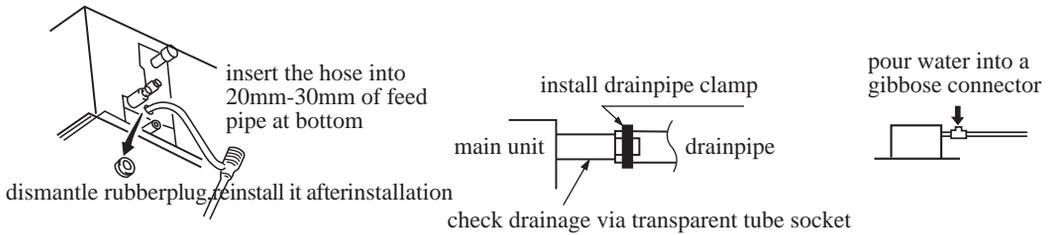


Before completing the electrical connection, a gibbose connector shall be installed on the drainpipe as to provide it with a water inlet port. Then, if any leakage exists in the piping, check it to make the water flow of the drainpipe smooth.

## 6. Installation of Air Return & Air Exhaust Pipes

For the choice and installation of air return port, air return pipe, air exhaust port and exhaust pipe, please refer to the design chart and exterior static pressure, and select the exhaust pipe with appropriate length and shapes.

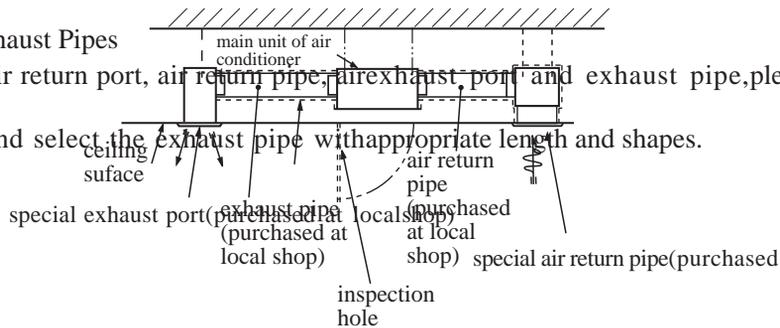

 
- The length difference between pipes should be limited to be less than 2:1;
- Make the piping as short as possible;
- Keep the min. elbow quantity;
- Wind the heat insulating material around the flange between the main unit and the exhaust pipe for heat insulation and sealing. Install the piping before fitting up the ceiling.



## 7. Connection of Air Return Pipe & Exhaust Port


(a) Intake of fresh air (at simplex feeding)

intake from side intake port air return pipe

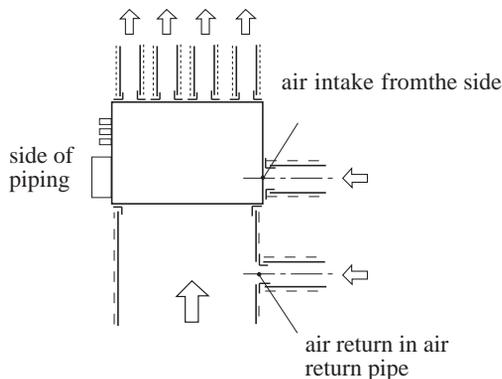

(b) Exhaust

exhaust from side exhaust port (together with air return port)

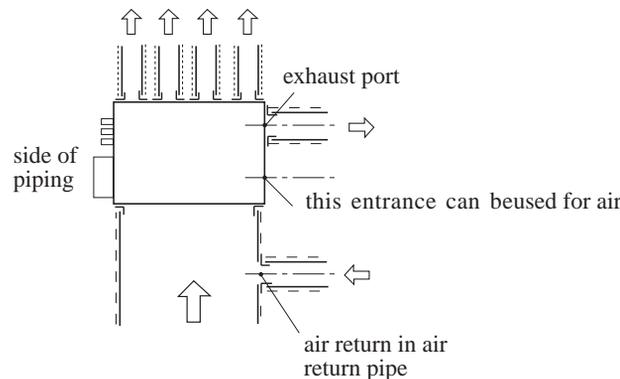


(c) The blast pipe should be heat-insulated as to prevent condensation.

# Installation Procedures


## 8. Cautions in Installation of Air Return Pipe & Exhaust Pipe

- It is recommended to use the blast pipes, which can be anti-condensation and absorb sound. (purchased at local shops) Complete the installation of the blast pipes before fitting up the suspended ceiling.
- place where the air is distributed evenly. An inspection hole should be left on the surface
- of the ceiling for future maintenance.
- 
- 

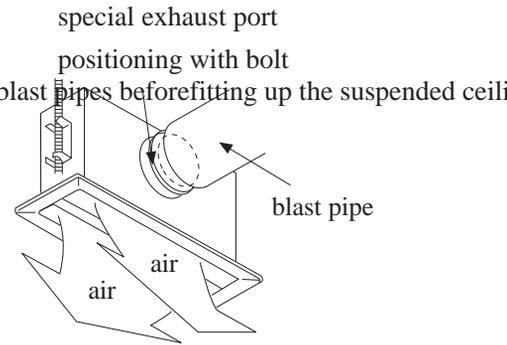

## 9. Examples for Bad Installation

- The unit is not equipped with the air return pipe and the inner side of the suspending ceiling is used as the return. There might be condensate dropping down at the outer side of the blast pipe. The humidity is high, even if the inner side of the suspended ceiling isn't used as a blast pipe in new concrete
- buildings. At this time, the whole body should use the thermo wool for heat preservation (the thermo wool can be packed with a steel wire). It is operated under the conditions beyond the limits, leading to
- Affected by the capacity of the exhaust fan, and the strong wind and wind direction in the outer flue, when the blowing quantity of the air conditioner exceeds the limits, the drained
- water of the heat exchanger will overflow, causing water leakage.
- 

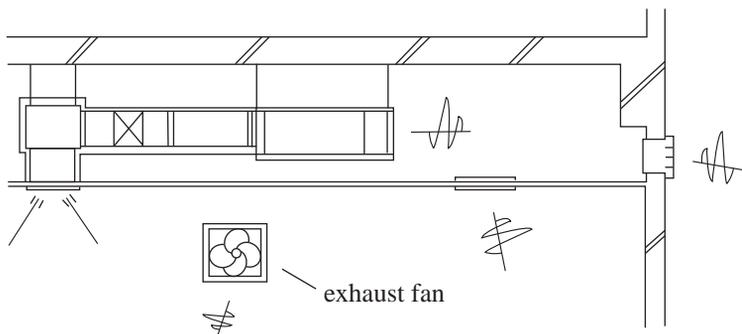

example of bad installation

# Installation Procedures

## Tubing Permissible Length & Height Difference

Please refer to the attached manual of outdoor units.

## Piping Materials & Heat Insulating Materials

As to prevent condensation, heat insulating treatment should be performed. The heat insulating treatment for gas and liquid piping should be done respectively.

Piping Material	Hard PVC tube VP31.5mm (inner bore)
Heat Insulating Material	Vesicant polythene thickness: over 7mm

## Tubing Materials & Specifications

Model		AD322MMAHA	AD382MMAHA AD482MMAHA
Tubing Size (mm)	Gas pipe	∅ 15.88	∅ 19.05
	Liquid pipe	∅ 9.52	∅ 9.52
Tubing Material	Phosphor deoxybronze seamless pipe (TP2) for air conditioner		

## Refrigerant Filling Amount

Add the refrigerant according to the installation instruction of outdoor unit. The addition of R22refrigerant


## Connecting Procedures of Refrigerant Tubing

Proceed the flare tube connecting operation to connect all the refrigerant tubes.

- Dual wrenches must be used in the connection of indoor unit tubing.

Mounting torque refers to the right table

- 

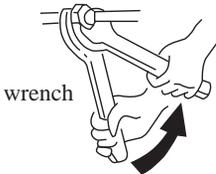

Outer Diameter of Tubing (mm)	Mounting Torque
∅ 9.52	32.7~39.9N.m
∅ 15.88	78.4~98.0N.m
∅ 19.05	97.2~118.6N.m

## Cutting and Enlarging

Cutting or enlarging pipes should be proceeded by installation personnel according to the operating

## Vacuumizing

Vacuumize from the stop valve of outdoor units with vacuum pump. Refrigerant sealed in indoor machine is not allowed to use for vacuumization.

## Open All Valves

Open all the valves of outdoor units. [NB: oil balancing stop valve must be shut up completely when connected one

## Checkup for Air Leakage

Check if there is any leakage at the connecting part and bonnet with hydrophone or soap suds. pressing

## Connecting

Connecting circular terminals:



- Connecting circular terminals: The connecting method of circular terminal is shown in the Fig. Take off the screw, connect it to the terminal tier after heading it through the opening of the tube if the tube is too long or flare opening is broken.

 
The connecting method of circular terminal is shown in the Fig. Take off the screw, connect it to the terminal tier after heading it through the opening of the tube if the tube is too long or flare opening is broken.

- Connecting straight terminals:

The connection methods for the circular terminals are shown as putting the line terminal into the terminal tier, tighten the screw and confirm it has been clamped by pulling the line gently.



- Pressing connecting line

After connecting line is completed, press the connecting line



# Electrical Wiring

1. Remove the upper cover of wired controller.  
(Do not damage the PC panel on the rear cover of line control when removing the upper cover).

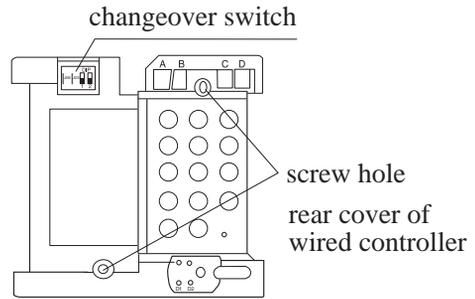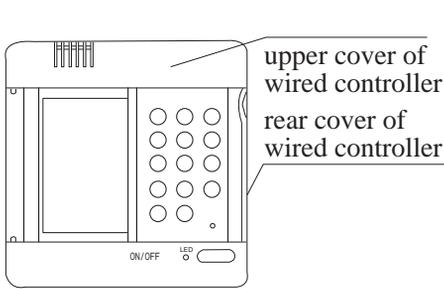

2. Install the wired controller.

Drill two holes on the wall according to the positions of two bolts on the rear cover of the line control, plug a peg into each hole, and fix the rear cover on the wall with the wood screws onto the holes.



Note: Do not install the back cover of the wired controller on uneven wall to avoid damage the wired controller.

3. Changeover of the switch.



For details, please refer to the dialing code instruction of line control at page 30.

4. Wiring:

- One wired controller controls one indoor unit
- Main & auxiliary wired controllers control one indoor unit

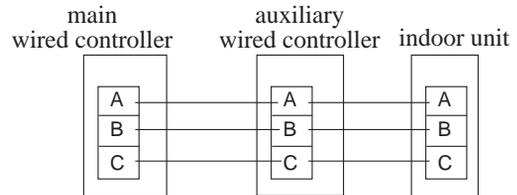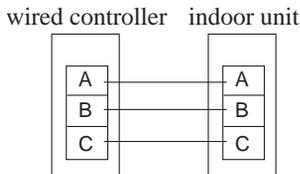

 - One line controls multiple indoor units. Meanwhile, adjust the disc dialing code SW01 of indoor units

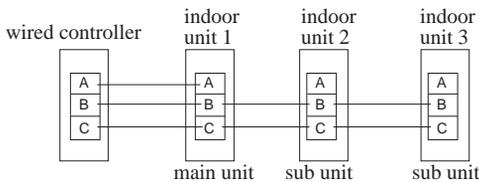

Note: Shielded lines must be used for the connection between indoor unit control panel and line control as

5. Close the upper cover of line control without pressing the connection.

Note: 1. Electrical switches and signal lines are self-provided.  
2. Don't touch the PC panel with your hands.

# Electrical Wiring

## ⚠ Warning

- Electrical construction should be made with specific mains circuit by the qualified personnel according to the installation instructions. If the installation is not sufficient.
- During arranging the wiring layout, specified cables should be used as the mains line, which accords with the local regulations.
- There must be the ground connection according to the criterion. Unreliable grounding may cause electrical shocks. Do not connect the grounding line to the gas pipe, water pipe, lightning rod and telephone line.




## ⚠ Attention

- Only copper wire can be used. Breaker for electric leakage should be provided, or electric shock may occur.
- The wiring of the mains line is of Y type. The power plug L should be connected to the live wire and plug N connected to null wire while ⊕ should be connected to the ground wire. For the type with auxiliary electrically heated body of electrical heating body will be electrified. If the power line is damaged, replace it by the professional personnel of the manufacturer or service center.
- The power line of indoor units should be arranged according to the installation instruction of indoor units. The electrical wiring should be arranged to avoid the following situations:
  - melting the insulating layer of cables, which may cause accidents.
  - After connected to the terminal tier, the tubing should be curved into be a U-type elbow and fastened with the pressing clip.
  - Controller wiring and refrigerant tubing can be arranged and fixed together.
- The machine can't be powered on before electrical operation. Maintenance should be done when the power is shut down.
- Seal the thread hole with heat insulating materials to avoid condensation. Signal line and power line are separately in the machine. Parameters for signal line: 2 (0.75-1.25)mm<sup>2</sup>( shielded line)
- 5 butt lines (1.5mm) are equipped in the machine before delivery, which are used in connection between the valve box and the electrical system of the machine. The detailed connection is displayed in the circuit diagram.




### Supply Wiring Drawing

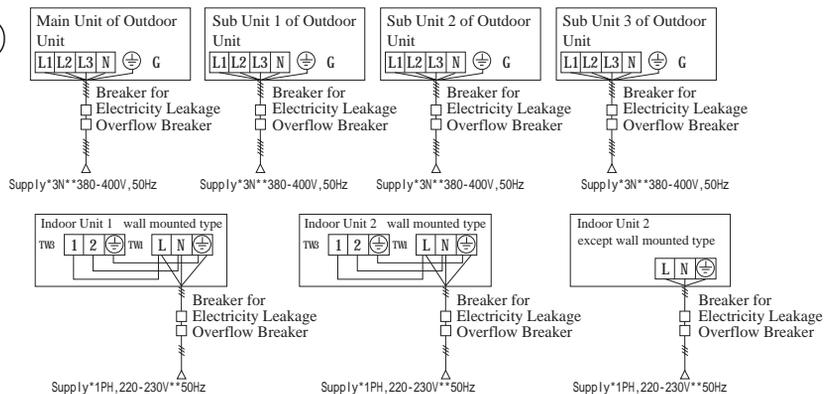

- Indoor units and outdoor units should be connected to the power source separately. Indoor units must share one single electrical source, but its capacity and specifications should be calculated. Indoor & outdoor units should

# Electrical Wiring

## Signal Wiring Drawing

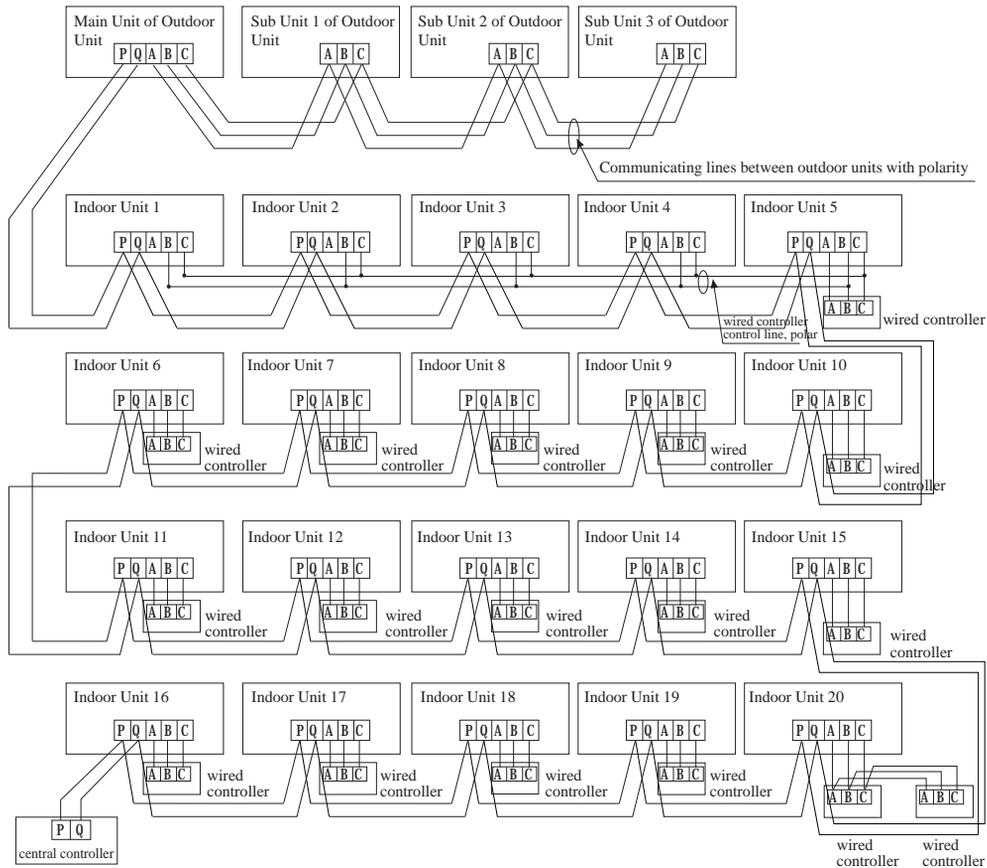

Outdoor units are of parallel connection via three lines with polarity. The main unit, central controller and all indoor units are connected via three lines with polarity. There are three connecting ways between line control and indoor units:

- A. One line control controls multiple units, i.e. 2-16 indoor units, as shown in the above figure, (1-5 indoor units). The indoor unit 5 is the line-controlled main unit and others are the line-controlled sub units. The remote control and the main unit (directly connected to the indoor unit of line control) are connected via three lines with polarity. Other indoor units and the main unit are connected via two lines with polarity. SW01 on the main unit of line control is set to 0 while SW01 on other sub units of line control are set to 1, 2, 3 and so on in turn. (Please refer to the code setting A at page 25)
- B. One line control controls one indoor unit, as shown in the above figure (indoor unit 6-19). The indoor unit and the line control are connected via three lines with polarity.
- C. Two line controls control one indoor unit, as shown in the figure (indoor unit 20). Either of the line controls can be set to be the master line control while the other is set to be the auxiliary line control. The master line control and indoor units, and the master and auxiliary line controls are connected via three lines with polarity.

When the indoor units are controlled by the remote control, switch over the modes by Switching Mode of Line-Controlled Main Unit/ Line-Controlled Sub Units/ Remote-Controlled Types. The signal terminals needn't to be equipped with wires and connected to the line control.

# Electrical Wiring

The combination of multiple indoor units can be controlled by wired controller or remote controller.

\* Switching Mode of Line-Controlled Main Unit/ Line-Controlled Sub Units/ Remote-Controlled Types can be used for switching over \*

Control Mode Socket/Code	Line-Controlled Main Unit	Line-Controlled Sub Unit	Type Switching Mode of Remote Control
CN23	strapping	no strapping	no strapping
CN30	strapping	strapping	no strapping
CN21	null	null	connected to receiving plank of remote control
SW08-[6]	ON	ON	OFF
Signal Terminals	A,B,C are connected to wired controller	AD are connected to wired controller	AD are not connected to wired controller

Note:AD\*MLAHA models are set to remote- controlled type before delivery

The wiring for the power line of indoor unit, the wiring between indoor and outdoor units as well as the wiring

Total Current of Indoor Units(A)	Items	Cross Section (mm <sup>2</sup> )	Length (m)	Rated Current of Overflow Breaker(A)	Rated Current of Power Leakage Breaker (A) Leaking Current(mA) Operating Period (S)	Cross Sectional Area of Signal Line	
						Outdoor -indoor (mm <sup>2</sup> )	Indoor -indoor (mm <sup>2</sup> )
*10		2	20	20	20 A,30 mA,0.1S or below	2 cores*0.75-2.0 mm <sup>2</sup> shielded line	
*10 and <15		3.5	25	30	30 A,30 mA,0.1S or below		
*15 and <22		5.5	30	40	40 A,30 mA,0.1S or below		
*22 and <27		10	40	50	50 A,30 mA,0.1S or below		

\* The electrical power line and signal lines must be fastened tightly.

\* Every indoor unit must have the ground connection.

\* The power line should be enlarged if it exceeds the permissible length.

\* Shielded lays of all the indoor and outdoor units should be connected together, with the shielded lay at the side of signal lines of outdoor units grounded at one point.

\* It is not permissible if the whole length of signal line exceeds 1000m.

## Signal Wiring of Wired controller

Length of Signal Line (m)	Wiring Dimensions	Length of Signal Line (m)	Wiring Dimensions
*100	0.3mm <sup>2</sup> *3 core shielding line	*300 <400	1.25mm <sup>2</sup> *3 core shielding line
*100 and <200	0.5mm <sup>2</sup> *3 core shielding line	*400 <600	2mm <sup>2</sup> *3 core shielding line
*200 and <300	0.75mm <sup>2</sup> *3 core shielding line		

\* The shielding lay of the signal line must be grounded at one end.

\* The total length of the signal line shall not be more than 600m.

### Code Setting

\* The code is dialed to "ON" position with the overline at the state of strapping if the code or overline status is "1"; The code is dialed to "OFF" position with the overline at the state of disconnection if the code or overline status is "0".

\* In the table below, the choice in the box "1" refers to the setting of the socket/overline before delivery.

\* Indoor Units PCB

A. With the indoor units controlled by the line control in groups, the address setting of indoor units: SW01

\* The setting of SW01 is performed by installation personnel during installation. \* Switch SW01 of the matching indoor

Position of SW01 Main Unit	Position of SW01 Sub Unit
0	1-15 (The dialing codes of sub units in the same group should be different)

# Electrical Wiring

## B. The central control address setting of indoor units: SW02

- \* When controlled by line control in groups, the main unit needs to be set while it is unnecessary to set the
- \* The setting of SW02 can be done by installation personnel during installation.

SW02								Switching Description
[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]	
1	0	0	0	0	0	0	0	Central control address = 1
1	0	0	0	0	0	0	1	Central control address = 2
-----								-----
1	1	1	1	1	1	1	0	Central control address = 127
1	1	1	1	1	1	1	1	Central control address = 128

## C. Communication Address Setting between Indoor Units and Outdoor Units: SW03

- \* The setting of SW03 can be done by installation personnel during installation.

SW03								Switching Description
[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]	
1	1	0	0	0	0	0	0	Communication address of indoor units = 1
1	1	0	0	0	0	0	1	Communication address of indoor units = 2
-----								-----
1	1	1	1	1	1	1	0	Communication address of indoor units = 63
1	1	1	1	1	1	1	1	Communication address of indoor units = 64

- There are 1 ways of setting communication addresses between indoor units and outdoor units:

A. Manual: first, set SW03-[1] to 1, and then set SW03-[8]-[3] according to requirements.

B. Take one of the three ways while only one way is valid at the same time. The highest priority level is the Line Control way.

C. Line/Remote Control Option: set SW08-[6].

- \* The setting of SW08-[6] can be done by installation personnel during installation.

Status of SW08-[6]	Controlling Method
<input type="checkbox"/> ON	Wired control( include one control to multiple units, two controls to one unit and one
OFF	Remote control

# Electrical Wiring

## \* Wired Controller Code Settings

Serial No.	Type	Switch Status	Switchover Function
J03	Choice of room temp. indications	0	There is no indication for room temperature
		<input type="checkbox"/> 1	Automatic reset after power failure
SW01-[1]	Switchover of main & auxiliary wired controllers	<input type="checkbox"/> ON	Set to auxiliary wired controller
		<input type="checkbox"/> OFF	Set to main wired controller
SW01-[2]	Switchover of Centigrade & Fahrenheit	ON	Indicating Fahrenheit
		<input type="checkbox"/> OFF	Indicating Centigrade
D1	Schedule compression function	ON	Indoor units perform schedule compression
		<input type="checkbox"/> OFF	Normal control
D2	Compulsive defrosting	ON	Sending 'Compulsive Defrosting' signal to indoor units
		<input type="checkbox"/> OFF	Normal control

- D1 and D2 are diodes. Turn to 'OFF' to disconnect holes of both sides while turn to 'ON' to strap the holes of two sides with a guide line. The code/ overline/ diode in the gray frame indicates that safety
- 
- 

### Difference between Main Wired Controller and Auxiliary Wired Controller

Comparison Items	Main wired controller	Auxiliary wired controller
Functions	All functions	It can only set shutdown, mode, air quantity, temperature

# Functions of Wired Controller

## Operation of Wired/Remote Controllers

### \* Initialization process of line control:

During the initialization of line control after powered on, [8888]\*[888]\*[88]\*[8] for the wired controllers and LED flash for about 30 seconds. At this time, all buttons are disabled.\* Description

### A Setting of central control address of indoor units:

When indoor unit code setting allows line control to set the address, continually press  $\hat{\text{ResettingFiltering Sc}}$  select the unit No. of the group by  $\hat{\text{Time +/-}}$  button.

Indication of temperature displays:

[Central Control Address]+XX: Press  $\hat{\text{Temp. +/-}}$  button. XX ranges from 0-7F with the initial value of 00. After finishing the setting, press  $\hat{\text{Setting}}$  button to save the setting and quit. By pressing other buttons or without pressing within 15 seconds, it will automatically quit and keep the last setting.

Setting of communication address between indoor units and outdoor units:

### B When indoor unit code setting allows line control to set the address, continually press $\hat{\text{ResettingFiltering Sc}}$ select the unit No. of the group by $\hat{\text{Time +/-}}$ button.

Indication of temperature displays:

[System Address]+XX: Press  $\hat{\text{Temp. +/-}}$  button. XX ranges from 0-3F with the initial value of 00. after finishing the setting, press  $\hat{\text{Setting}}$  button to save the setting and quit. By pressing other buttons or

Inquiry of fault records of indoor units:

In the state of startup or shutdown, press  $\hat{\text{CHECK}}$  button to go into the mode of inquiring faults of all indoor units in this group. The temperature zone indicates  $\hat{\text{CHECK}}$  and  $\hat{\text{Unit No.}}$ , which

### C shows the unit number with the actual connection in sequence in the decimal system. Meanwhile, the time zone $\hat{\text{--}}$ and YY refers to the code of the previous fault. The indication of fault code of each machine lasts 3 seconds. After the indication of the whole group, it automatically quit.

Removing abnormal states & clearing fault records:

Under normal conditions, continually press  $\hat{\text{CHECK}}$  button for 5 seconds to clear fault records.

Inquiring running state of indoor units of the group:

Under normal condition, press  $\hat{\text{Setting}}$  button for 5 seconds until the temperature zone on the liquid crystal screen shows [XX], referring to the unit number of indoor units and select unit, and select unit number by  $\hat{\text{Temp. +/-}}$  button. The time zone displays [YZZZ], in which, Y refers to

### D the data type and ZZZ to the responding data. Select the data type by $\hat{\text{Time +/-}}$ button.

### E

Y	ZZZ	System
A	Temperature of indoor unit transducer TA	Actual value, decimal system
B	Temperature of indoor unit transducer TC1	Actual value, decimal system
C	Temperature of indoor unit transducer TC2	Actual value, decimal system
D	PMV step of indoor units	Actual value/2. decimal system(e.g. indication of 50 with actu
E	Communication address between indoor/outdoor units	Actual value, sexadecimal system
F	Central address	Actual value, sexadecimal system

Under the inquiring state, press  $\hat{\text{CHECK}}$  button to quit the inquiring state and return to the normal operating

# Test Run & Fault Code

## Before Test Run

- Before switching it on, test the supply terminal tier (L, N terminals) and grounding points with 500V megaohm meter and check if the resistance is above 1M\*. It can't be operated if it is below 1M\*.
- Connect it to the power supply of outdoor units to energize the heating belt of the compressor. To protect the compressor at startup, power it on 12 hours prior to the operation.

### Check if the arrangements of the drainpipe and connection line are correct.

The drainpipe shall be placed at the lower part while the connection line placed at the upper part. Heat preservation measures should be taken such as winding the drainpipe esp. in the indoor units with heating insulating materials.

The drain pipe should be made a slope type to avoid protruding at the upper part and concaving at the lower part on the way.

### Checkup of Installation

- check if the mains voltage is matching
- check if there is air leakage at the piping joints
- check if the connections of mains power and indoor & outdoor units are correct
- check if the serial numbers of terminals are matching
- check if the installation place meets the requirement
- check if there is too much noise
- check if the connecting line is fastened
- check if the connectors for tubing are heat insulated
- check if the water is drained to the outside
- check if the indoor units are positioned

## Ways of Test Run

Do ask the installation personnel to make a test run. Take the testing procedures according to the manual and check if the temperature regulator works properly.

When the machine fails to start due to the room temperature, the following procedures can be taken to do the compulsive running. The function is not provided for the type with remote control.

- Set the wired controller to refrigerating/heating mode, press 'ON/OFF' button for 5 seconds to enter into the compulsory running and stop the operation of the air conditioner.

## Fault Remedies

When any fault appears, refer to 'Inquiry of fault records of indoor units' at the previous page, consult the fault code of line control or the flashing times for LED5 of computer panel of indoor units/health lamp of receiving window.

Wired Controller Fault Code	PCB LED5 (Indoor Units)/ Receiving Window Health Lamp (Remote Controller)	Fault Descriptions
01	1	Fault of indoor unit ambient temp. transducer TA
02	2	Fault of indoor unit pipe temp. transducer TC1
03	3	Fault of indoor unit pipe temp. transducer TC2
04	4	Fault of indoor unit dual heat source temp. transducer
05	5	Fault of indoor unit EEPROM
06	6	Fault of communication between indoor & outdoor units
07	7	Fault of communication between indoor unit and wired control
08	8	Fault of indoor unit water drainage
09	9	Fault of duplicate indoor unit address
0A	10	Fault of duplicate central control address
Outdoor Unit Code	20	Corresponding faults of outdoor units

# Technical Specifications

Model		AD322MMAHA	AD382MMAHA	AD482MMAHA
Power Supply		1PH.220-230V~,50Hz	1PH.220-230V~,50Hz	1PH.220-230V~,50Hz
Cooling	Cooling Capacity	9000W	11200W	14000W
	Rated Power	200W	200W	200W
	Rated Current	1.0A	1.0A	1.0A
Heating	Heating Capacity	10000W	12500W	16000W
	Rated Power	200W	200W	200W
	Rated Current	1.0A	1.0A	1.0A
Noise (Indoor Units)		43/37/35dB(A)	43/37/35dB(A)	44/40/36dB(A)
Net Weight (Indoor Units)		55kg	55kg	55kg
Air Volume (Indoor Units)		1900m <sup>3</sup> /h	1900m <sup>3</sup> /h	2100m <sup>3</sup> /h

NB: All descriptions and data are subject to change without notice. The standard working conditions of the state regulations are as follows: for refrigerating: dry bulb in the room: 27\*, wet bulb:19\*; dry bulb in the condition of 220V. Parameters varies with indoor and outdoor temperatures.

## Operating Range of Air Conditioner

Cooling Dehumidifying	Indoor Side	Max.	Dry Bulb Temp: 32*; Wet Bulb Temp: 23*
		Min.	Dry Bulb Temp: 18*; Wet Bulb Temp: 14*
	Outdoor Side	Max.	Dry Bulb Temp: 43*; Wet Bulb Temp: 26*
		Min.	Dry Bulb Temp: 18*
Heating	Indoor Side	Max.	Dry Bulb Temp: 27*
		Min.	Dry Bulb Temp: 15*
	Outdoor Side	Max.	Dry Bulb Temp: 21*; Wet Bulb Temp: 15*
		Min.	Dry Bulb Temp: -15*

**HAIER GROUP**

Qingdao Haier Air Conditioner Electric Co., Ltd.

Address: Haier Garden ,Qianwangang Road , Economic Development Zone,  
Qingdao ,Shandong 266500, P.R.China

Web Site: <http://www.haier.com>



**Большая библиотека технической документации**  
**<http://splitoff.ru/tehn-doc.html>**  
**каталоги, инструкции, сервисные мануалы, схемы.**