


## Полное техническое руководство

**RSJi-35/300RDN3**


**RSJ-35/300RDN3**




Большая библиотека технической документации  
<http://splitoff.ru/tehn-doc.html>  
каталоги, инструкции, сервисные мануалы, схемы.


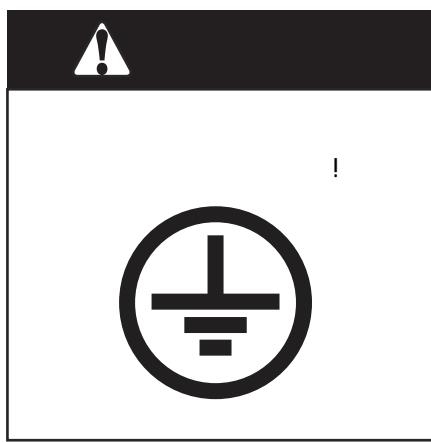


1		
One Way Valve		
Adaptor	1	

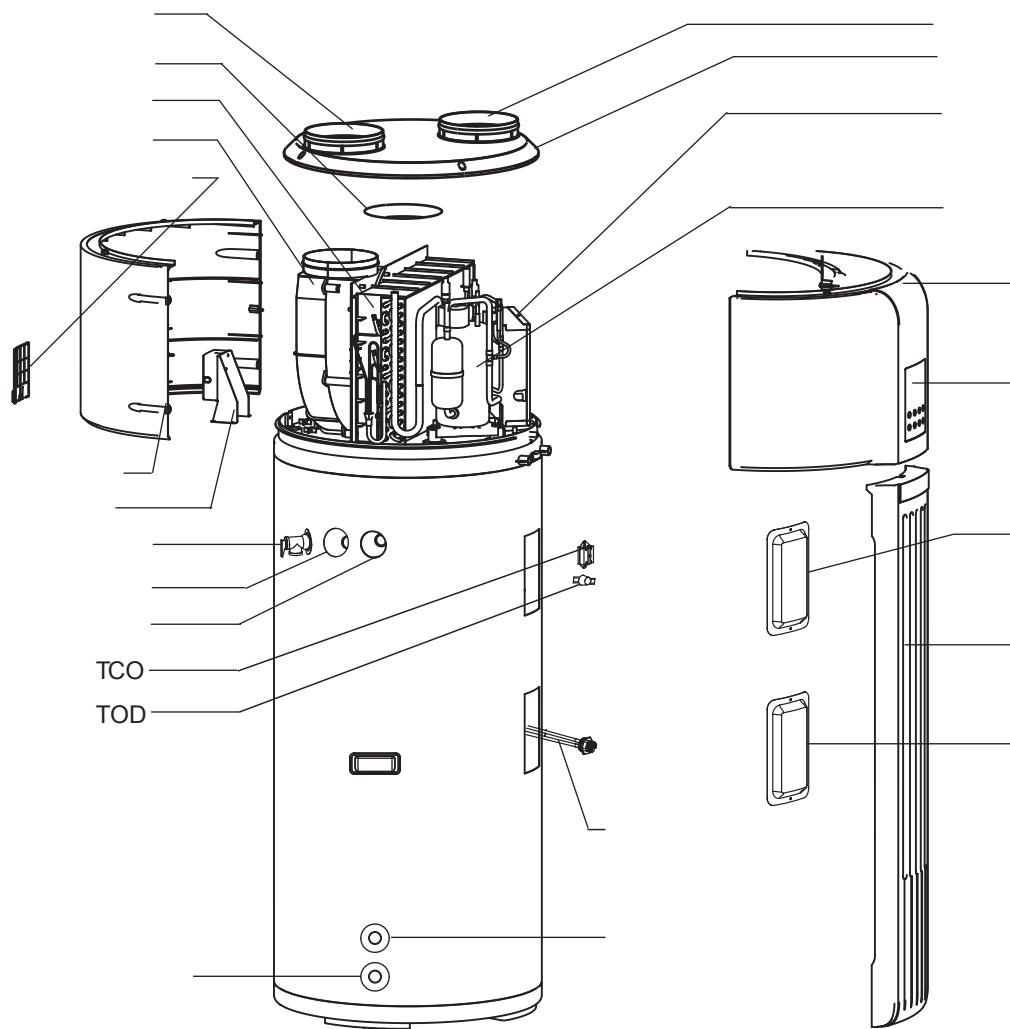

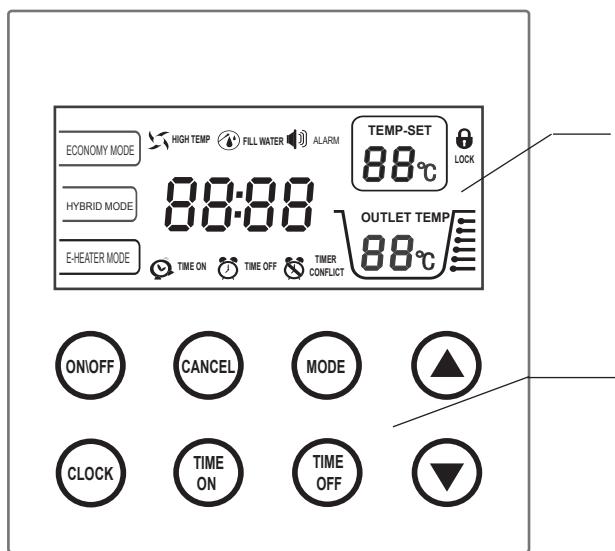

(8)	40
(9)	OUTLET TEMP
(10)	TIMER CONFLICT( ),
(11)	TIME OFF
(12)	TIME ON
(13)	CLOCK
(14)	E-HEATER MODE ( )
(15)	HYBRID MODE +
(16)	ECONOMY MODE

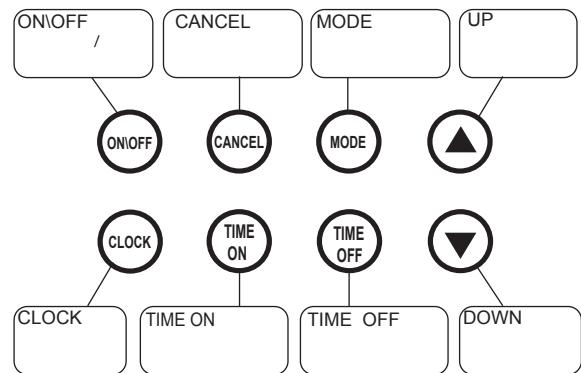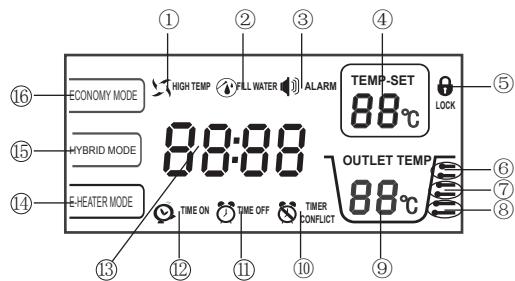

①	HIGH TEMP	50
②	FILL WATER	,
③	ALARM	,
④	TEMP-SET	
⑤	LOCK	
⑥		60
⑦		50

3


1

ON/OFF,


ON/OFF

1





1

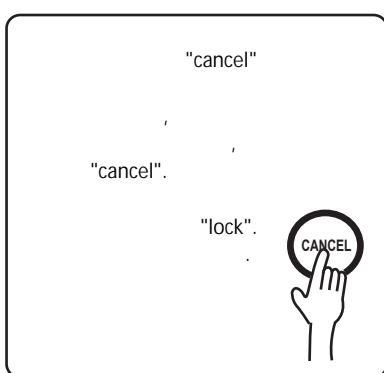

24-  
00:00.




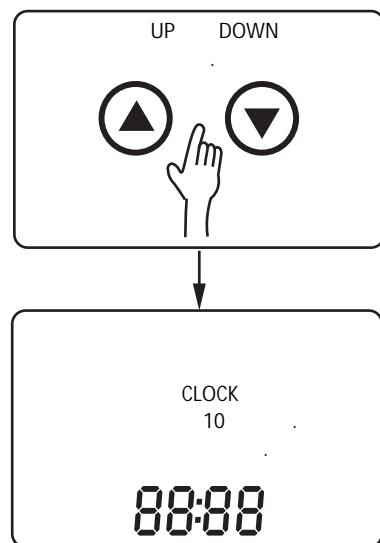


00:00.

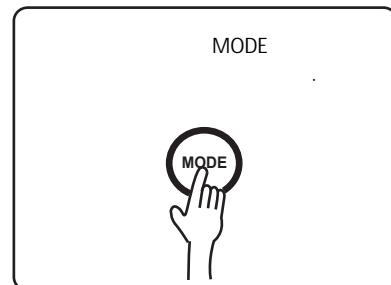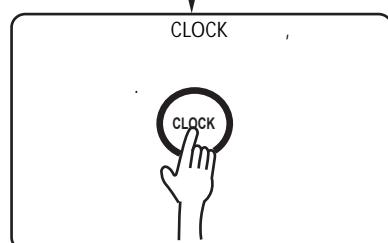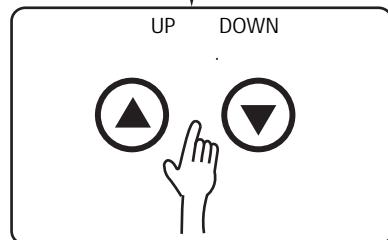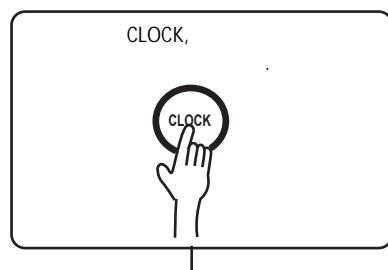







+60












+55  
+38

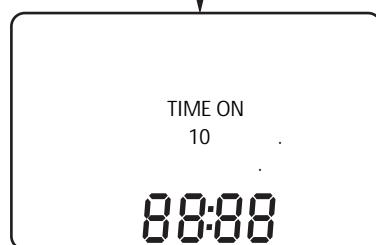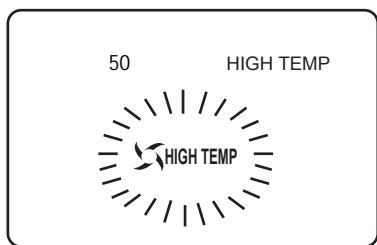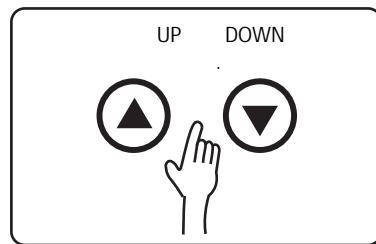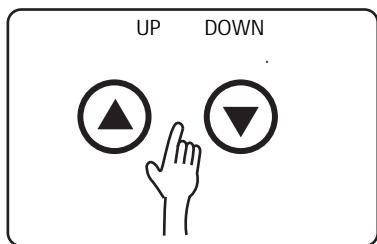

(TIME ON)

24:00

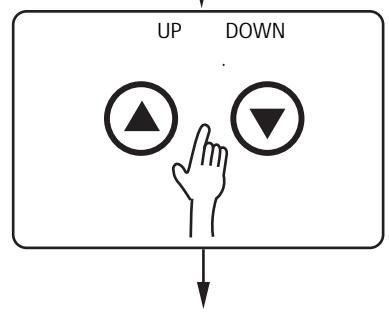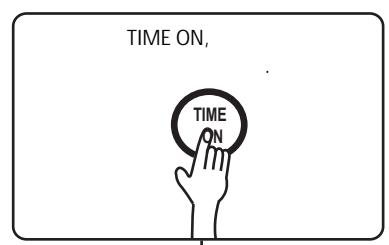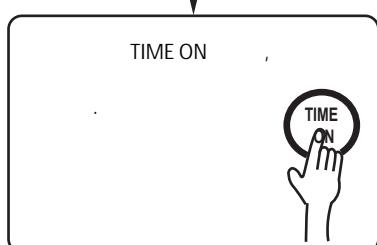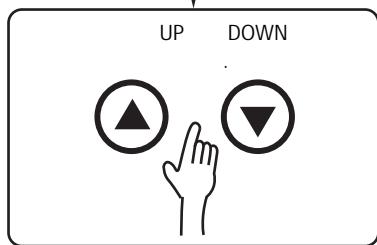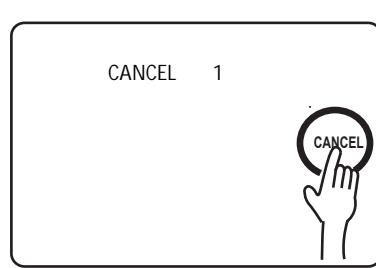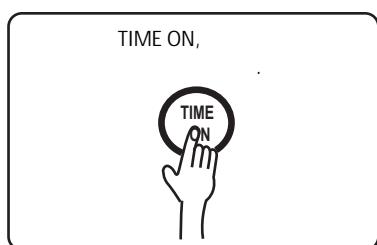

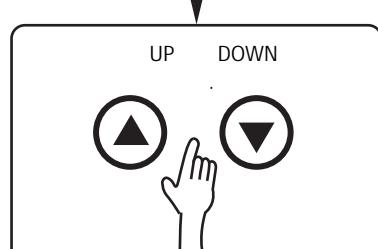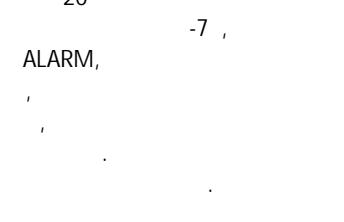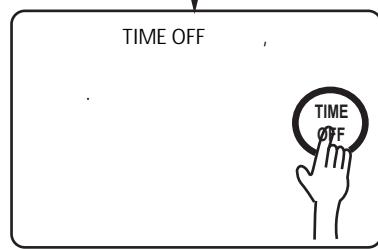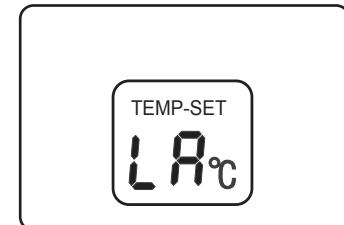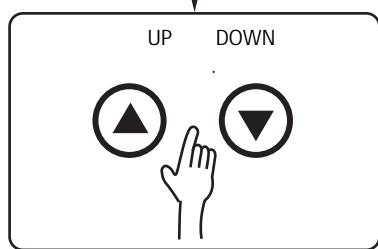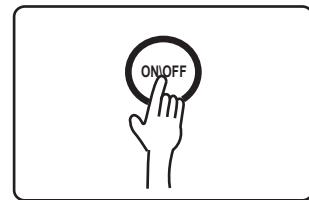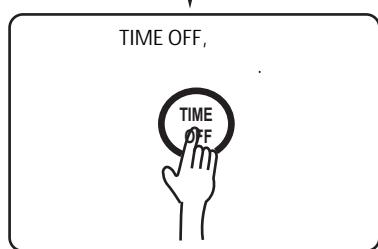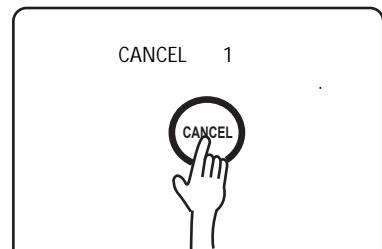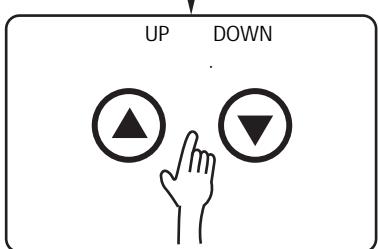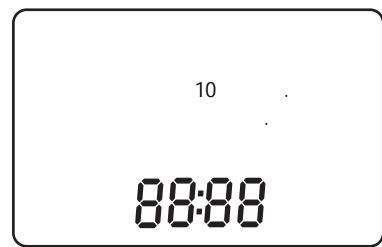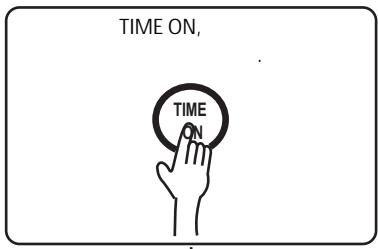



■






•


ALARM

CANCEL



ALARM

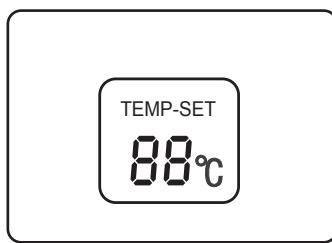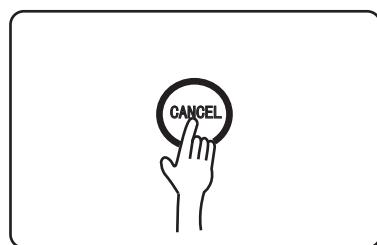


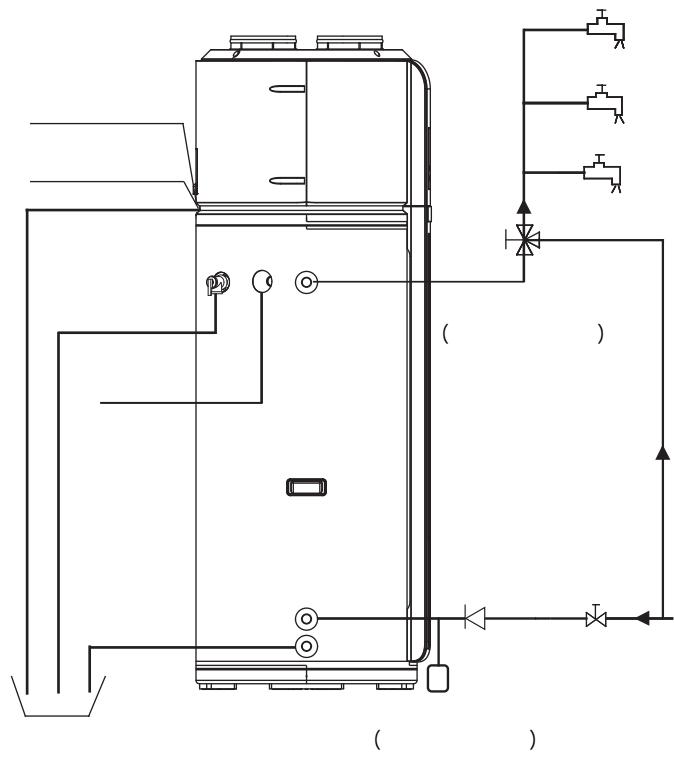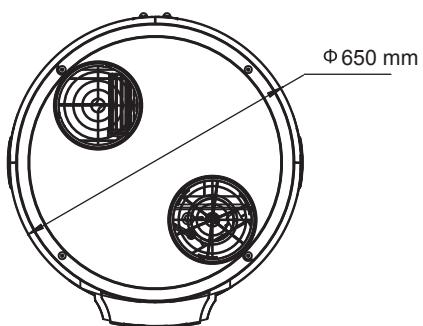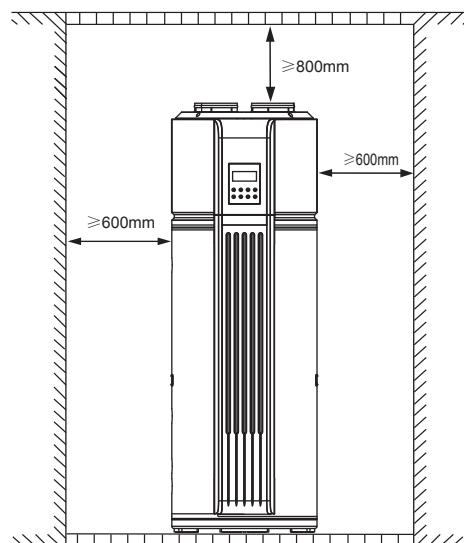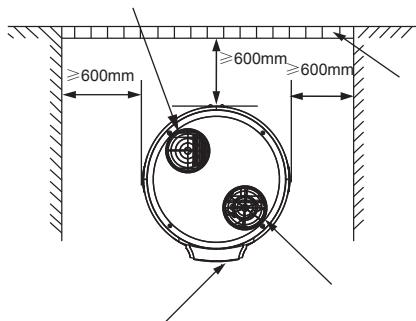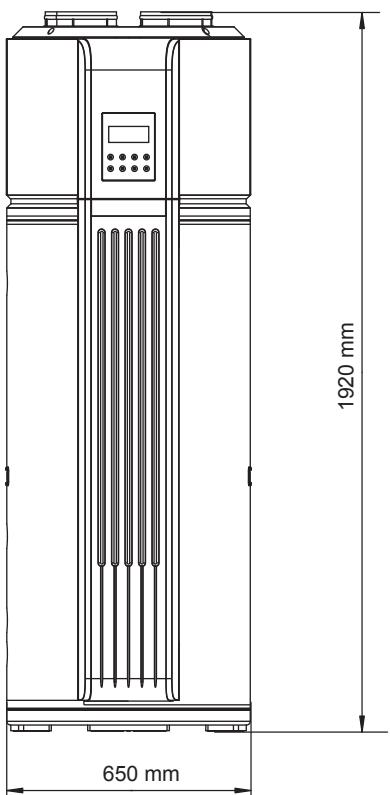

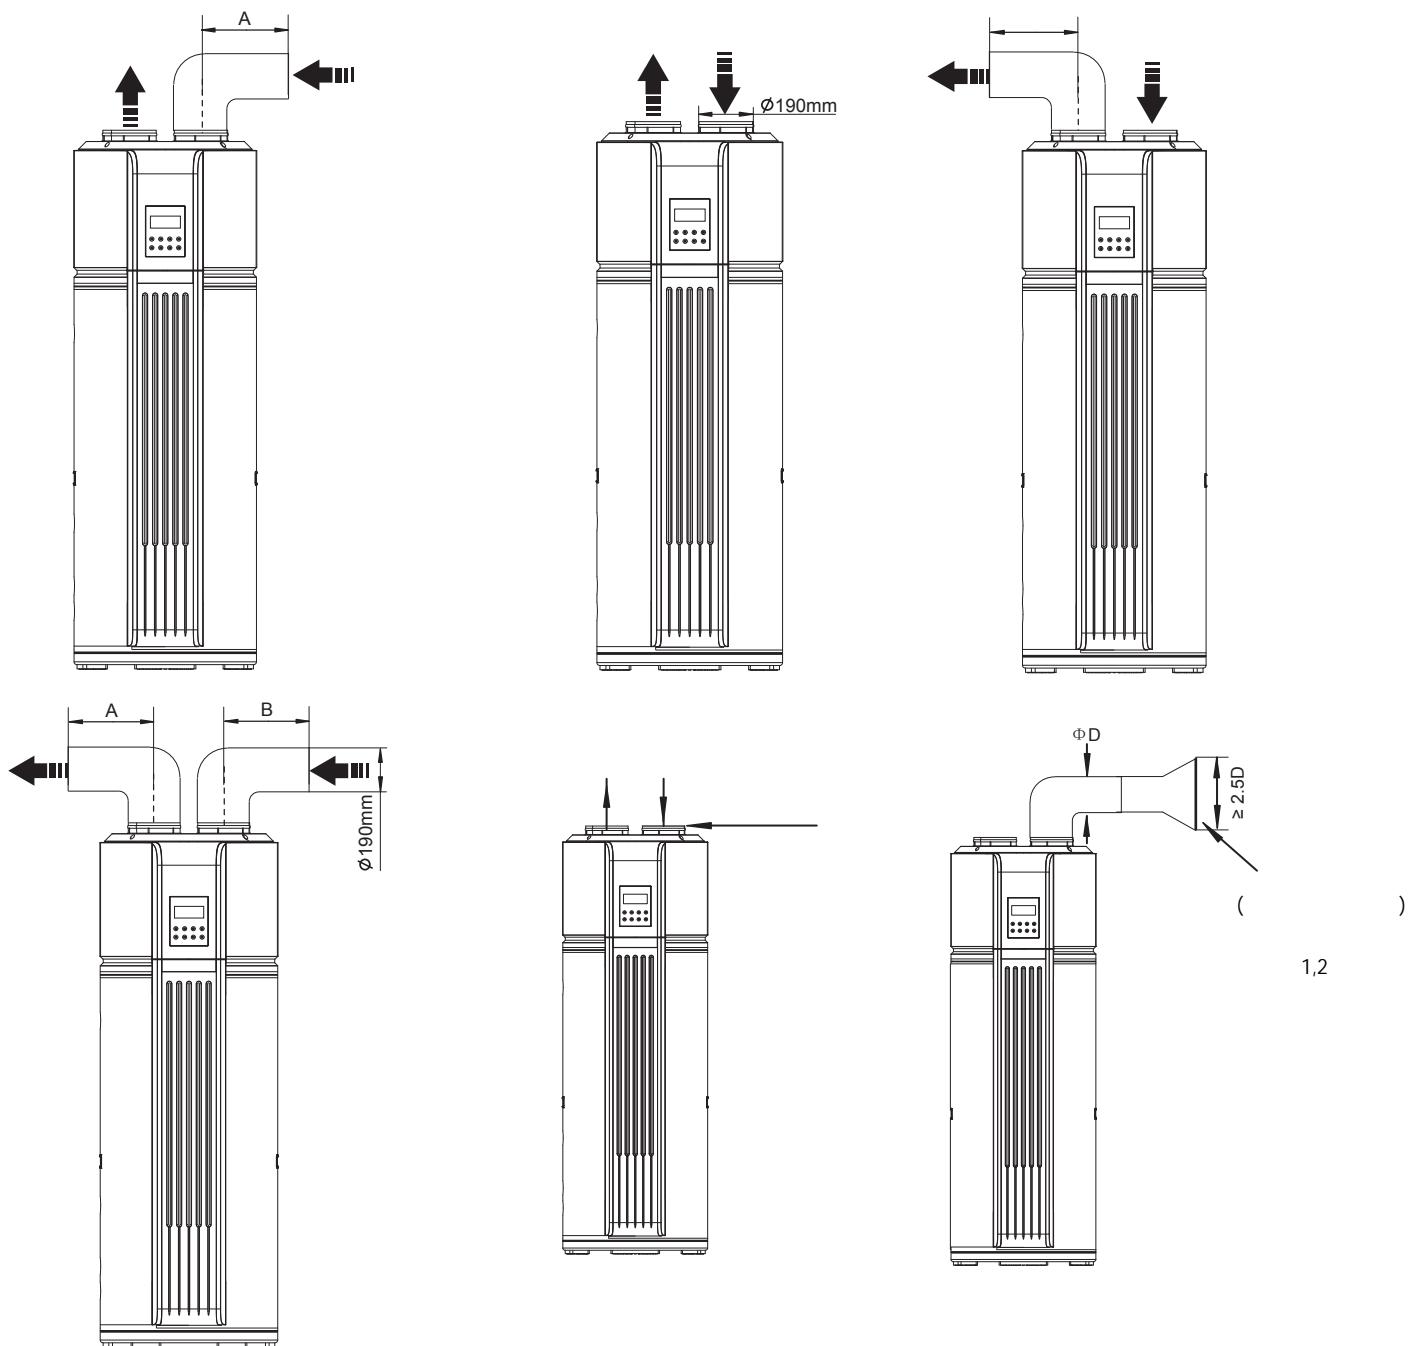

( )	Φ 190	190X190	
( / )	≤2	≤2	
( / )	≤10	≤10	
( / )	≤2	≤2	
-	≤5	≤5	

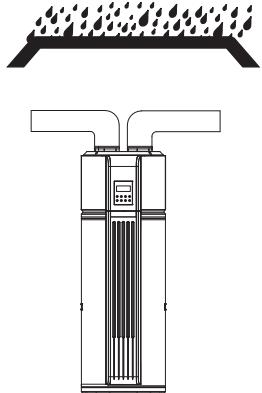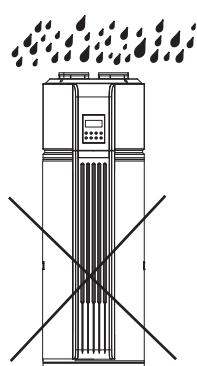

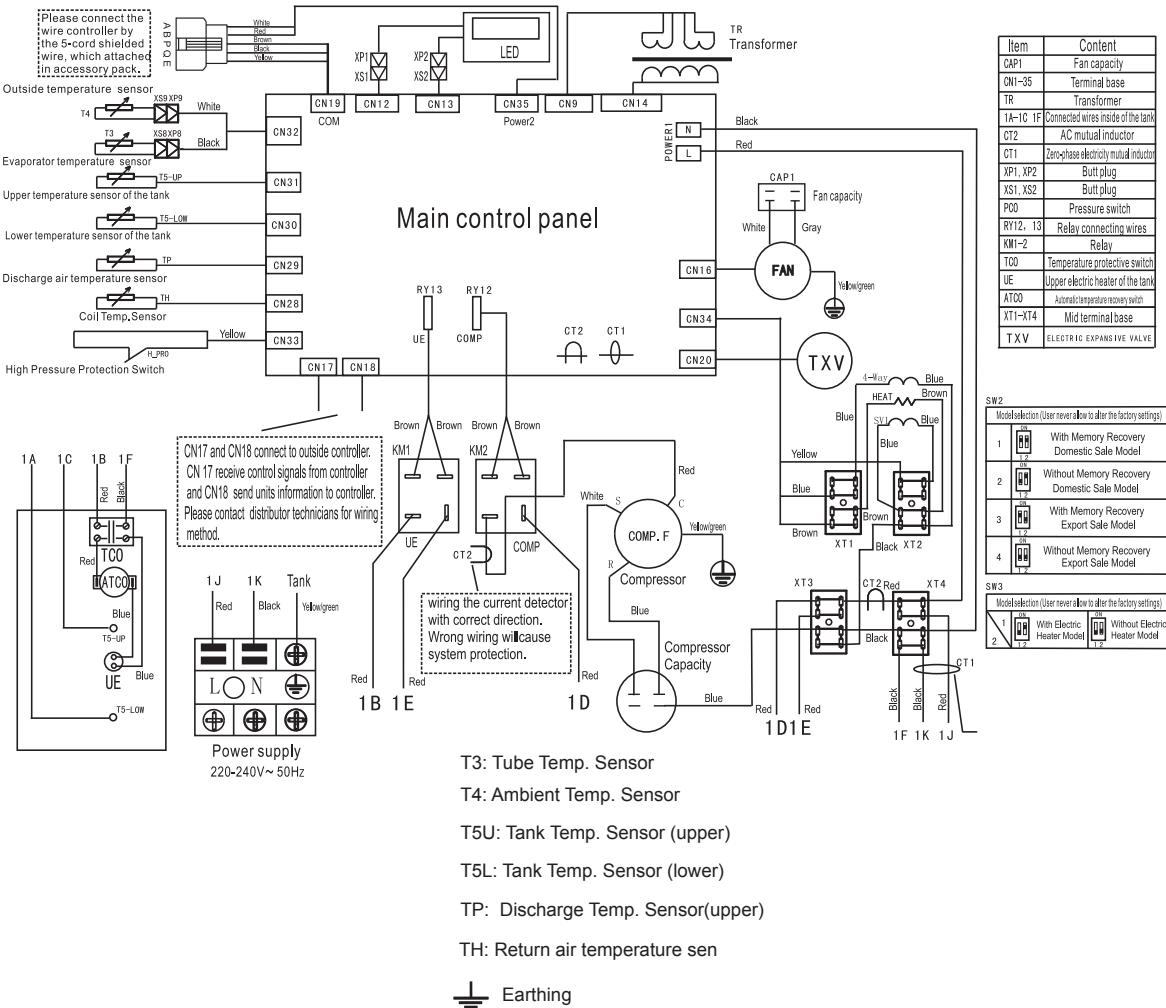

E0	T5U
E1	T5L
E2	/
E4	
E5	
E6	
E7	
E8	Electric leakage protection
E9	
P1	
P2	
P3	
P4	
P8	
P9	
LA	( )

RSJ-35/300RDN3-B
220-240V~50Hz
4
( ), 2
( ), 2
/ ( )
30 mA ≤0.1sec

RSJ(i)-35/300RDN3-B			
		+	
	3000W	3000W	3000W
/	1500W/6.5A	4300W/18.7A	3000W/13.0A
	220-240V~ 50Hz		
	/		
	850W		
	3000W		
	R134a(1200g)		
	55	,	38 60
/			
	DN20		
	1.0MPa		
	80W		
	Φ650×1920mm		
	300L		
	123kg		
15/12 ( / )			
+15			+45



Большая библиотека технической документации  
<http://splitoff.ru/tehn-doc.html>  
 каталоги, инструкции, сервисные мануалы, схемы.